




Connector Views

146. DLC

- Gray
- Behind center lower cover ('00-'01)
- Under middle of dash ('02-'06)
- On dashboard wire harness B (right branch)

View from terminal side

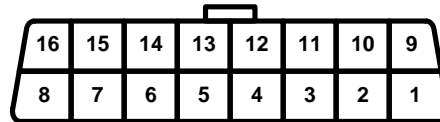

- 1 (9) —
- 2 (10) —
- 3 (11) —
- 4 (12) BLK (G402) (Ground for PGM tester)
- 5 (13) BRN/YEL (G101) (Signal for ground communication network)
- 6 (14) —
- 7 (15) GRY (DLC and MIL circuits) (K line for off-board communication)
- 8 (16) —
- 9 (1) BRN (Circuit F28)
- 10 (2) —
- 11 (3) —
- 12 (4) Late Production '01; '02-'06: RED/WHT (Write enable)
- 13 (5) —
- 14 (6) LT BLU (Circuit F54)
- 15 (7) —
- 16 (8) WHT/RED (Fuse 18) (Power for PGM tester (B+, 4 amps max))

() = Non-SAE terminal number used in service manual.

NOTE: Data Link Connector (DLC) terminals are numbered according to SAE standard J1962, not the Honda standard. The numbers of the four end terminals are molded into the corners of the connector face.

Late Production '01; '02-'06: This view of the DLC is the same as if you were looking at it installed in the vehicle.