




# Connector Views

## 158. Audio Unit

- Light Blue
- Middle of dash

### Connector A


- On dashboard wire harness B (right branch)

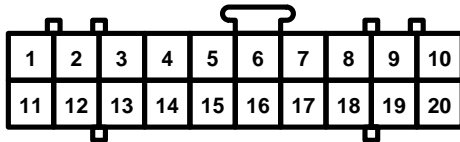

- |                              |                           |
|------------------------------|---------------------------|
| 1 WHT/GRN (Antenna)          | 11 —                      |
| 2 YEL/RED (ACC)              | 12 —                      |
| 3 —                          | 13 —                      |
| 4 —                          | 14 —                      |
| 5 PNK (RR SP+)               | 15 BLU/YEL (RR SP-)       |
| 6 BLU/WHT (LR SP+)           | 16 BLU/BLK (LR SP-)       |
| 7 GRN/YEL (PD SP+)           | 17 GRY/RED (PD SP-)       |
| 8 GRN/BLK (DD SP+)           | 18 LT GRN (DD SP-)        |
| 9 RED/BLK (Illumination (+)) | 19 RED (Illumination (-)) |
| 10 WHT (Power)               | 20 BLK (Ground)           |

### Connector B (Honda Accessory)

- On CD changer Honda accessory BUS cable

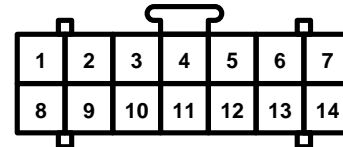

- |                            |                             |
|----------------------------|-----------------------------|
| 1 BLK (CD changer control) | 8 BLK (CD changer control)  |
| 2 RED (CD changer control) | 9 WHT (CD changer control)  |
| 3 —                        | 10 BLK (CD changer control) |
| 4 BRN (CD changer control) | 11 —                        |
| 5 BLU (CD changer control) | 12 YEL (CD changer control) |
| 6 —                        | 13 GRN (CD changer control) |
| 7 —                        | 14 —                        |