


<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000002A07J
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> PA10/PB10/PB12 (HYBRID TRANSMISSION / TRANSAXLE): SHIFT LEVER KNOB: INSTALLATION; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## INSTALLATION

### CAUTION / NOTICE / HINT


#### COMPONENTS (INSTALLATION)

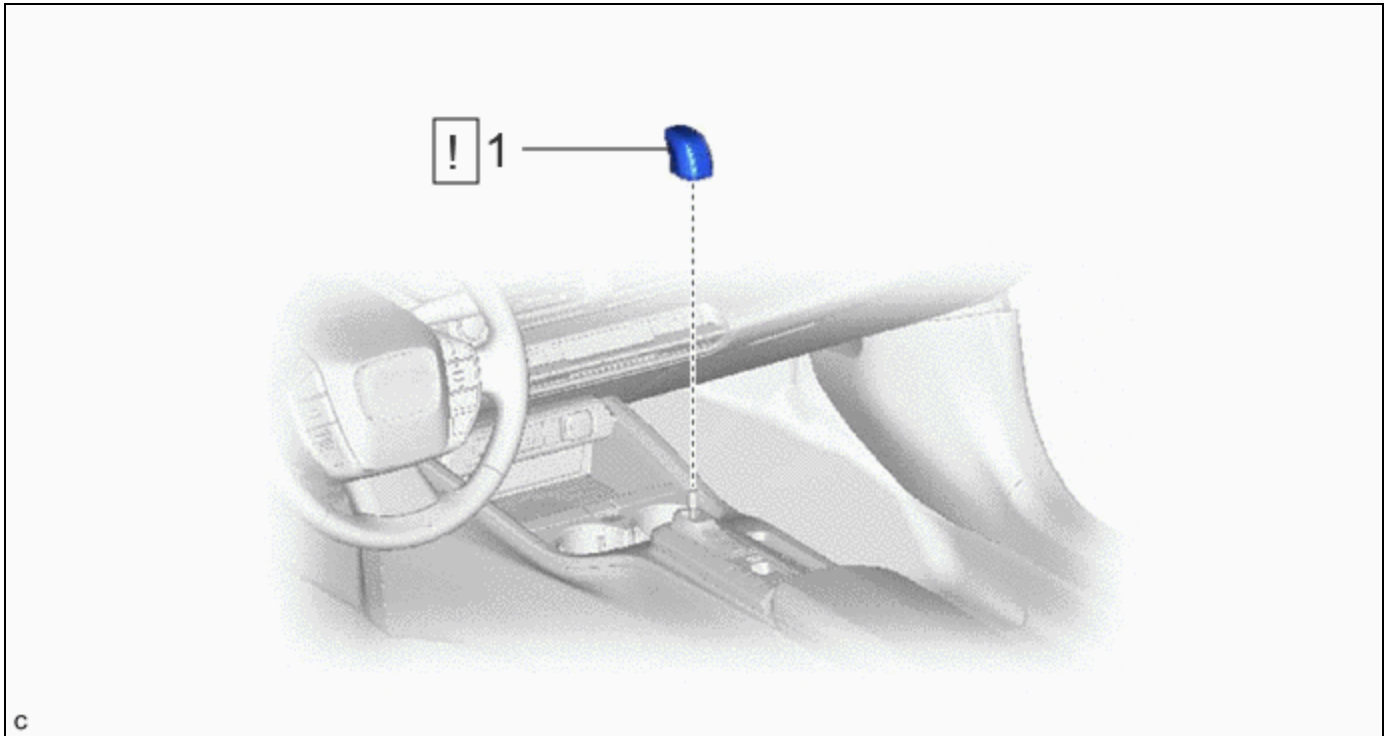

PROCEDURE		PART NAME CODE			
1	SHIFT LEVER KNOB SUB-ASSEMBLY	33504F	<a href="#">INFO</a>	-	-

## PROCEDURE

### 1. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

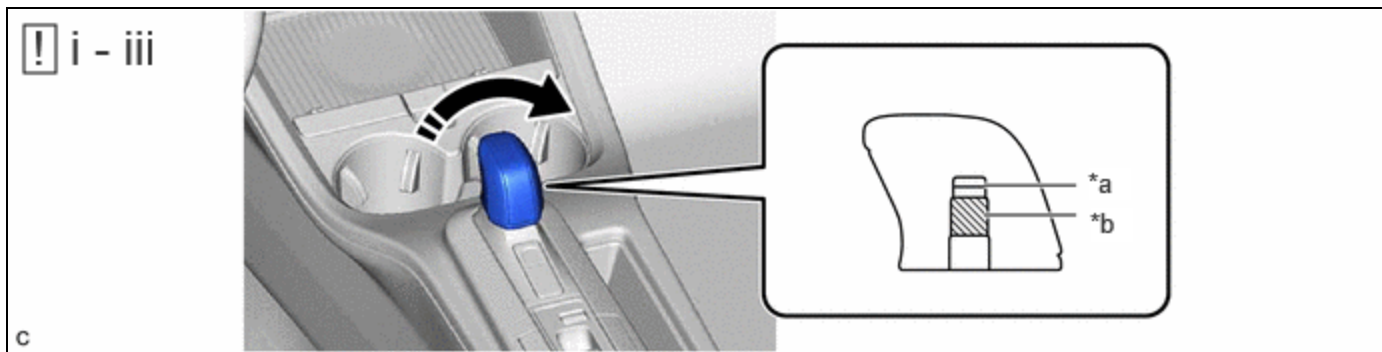

*a	Non-threaded Part	*b	Threaded Part
----	-------------------	----	---------------

(1) Turn the shift lever knob sub-assembly clockwise until it cannot be turned easily.

**NOTICE:**

The shift lever knob sub-assembly will become difficult to turn when the transmission floor shift assembly contacts the non-threaded part of the shift lever knob sub-assembly.

(2) Turn the shift lever knob sub-assembly clockwise an additional 360° or more to install it as shown in the illustration.

(3) Tighten the shift lever knob sub-assembly until it is aligned with the longitudinal direction of the vehicle.

**NOTICE:**

- Make sure to only turn the shift lever knob sub-assembly clockwise when adjusting the installation position.
- After installing the shift lever knob sub-assembly, move the shift lever to each shift position and confirm that the shift lever knob sub-assembly does not contact the position indicator housing.

