

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029ZLR
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: M20A-FXS (ENGINE CONTROL): AIR FUEL RATIO SENSOR (for Sensor 2): INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

INSPECTION


PROCEDURE

1. INSPECT AIR FUEL RATIO SENSOR

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
1 (HA1B) - 2 (+B)	20°C (68°F)	2 to 6 Ω	Ω
1 (HA1B) - 4 (A1B-)	Always	10 kΩ or higher	kΩ

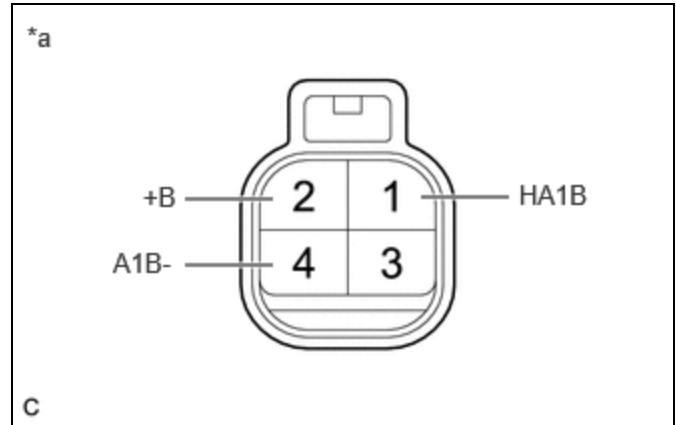

If the result is not as specified, replace the air fuel ratio sensor.

*a	Component without harness connected (Air Fuel Ratio Sensor)
----	---

