

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM100000028PGA
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> POWER ASSIST SYSTEMS: POWER STEERING SYSTEM: EPS Warning Light Circuit; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

## EPS Warning Light Circuit

## DESCRIPTION

Use the following procedure if no DTCs are output but the EPS warning light is illuminated continuously.

The power steering ECU assembly controls the warning light in the combination meter assembly via CAN communication.

## PROCEDURE

### 1. CHECK VEHICLE CONTROL HISTORY (POWER STEERING SYSTEM)

- (a) Connect the GTS to the DLC3.
- (b) Turn the ignition switch to ON.
- (c) Enter the following menus: Chassis / EMPS / Utility / Vehicle Control History (RoB).
- (d) Using the GTS, check for Vehicle Control History.

Click here [INFO](#)

**Chassis > EMPS > Utility**

TESTER DISPLAY
Vehicle Control History (RoB)

### **HINT:**

The EPS warning light illuminates if any vehicle control history is stored.

RESULT	PROCEED TO
Vehicle control history not stored for power steering ECU assembly (for Multi-information Display)	A
Vehicle control history stored for power steering ECU assembly	B

## **B** ▶ **PERFORM TROUBLESHOOTING AND REPAIR REGARDING VEHICLE CONTROL HISTORY**

### **NOTICE:**

After performing troubleshooting and repair regarding vehicle control history, clear the vehicle control history.




## 2. INSPECT COMBINATION METER ASSEMBLY

(a) Perform the Active Test of the combination meter assembly using the GTS.

Click here [INFO](#)

### Body Electrical > Combination Meter > Active Test

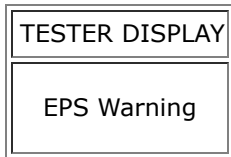

(b) Check the combination meter assembly.

OK:

The EPS warning light turns on or off in accordance with the GTS operation.

**OK** ▶ REPLACE POWER STEERING ECU ASSEMBLY [INFO](#)

**NG** ▶ GO TO METER / GAUGE SYSTEM [INFO](#)

