

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029ZOO
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SEAT BELT: REAR SEAT OUTER BELT ASSEMBLY: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

INSPECTION

PROCEDURE

1. INSPECT REAR SEAT OUTER BELT ASSEMBLY


(a) Before installing the rear seat outer belt assembly, check the ELR function.

NOTICE:

Do not disassemble the retractor.

- (1) When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.

If the result is not as specified, replace the rear seat outer belt assembly.

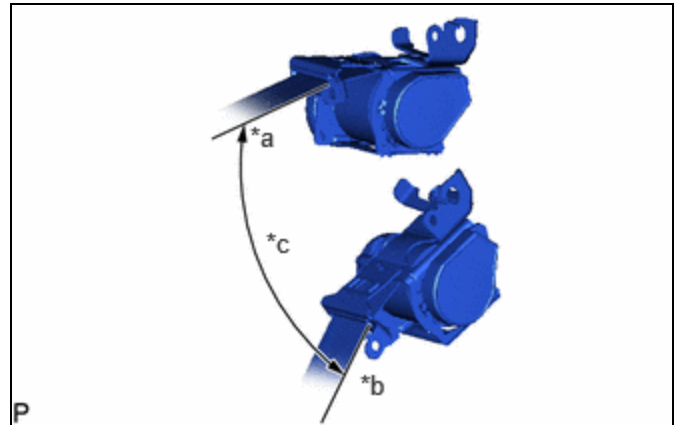

*a	Unlock
*b	Lock
*c	45°

