

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029DJZ
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: MIRROR (INT): DIGITAL INNER MIRROR: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

INSPECTION

PROCEDURE

1. INSPECT INNER REAR VIEW MIRROR ASSEMBLY

Pre-procedure1


- (a) Connect a positive (+) lead from the auxiliary battery to terminal 1 and terminal 6 and a negative (-) lead to terminal 2.
- (b) Confirm that the mode selection lever is set to the mirror surface mode side.

HINT:

If the mode selection lever is set to the digital mirror surface mode side, move it to the mirror surface mode side.

- (c) Attach black colored tape to the ambient light sensor to prevent it from sensing.
- (d) Using the menu switch and cursor operation switches, turn on automatic anti-glare mode.

Procedure1

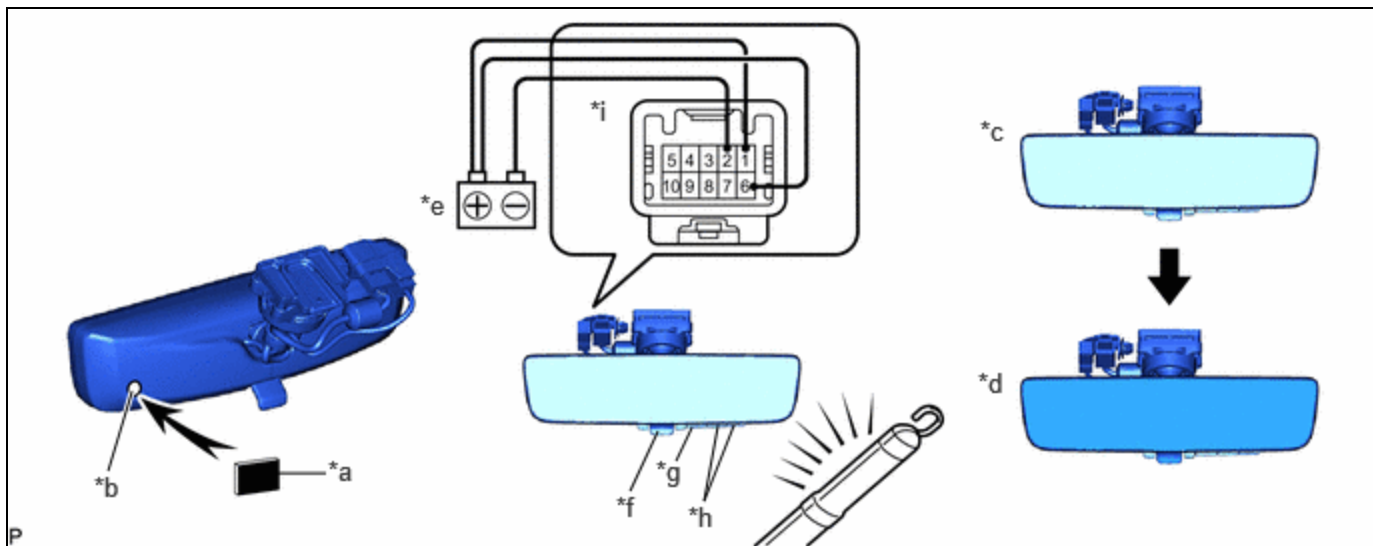

*a	Black Colored Tape	*b	Ambient Light Sensor
*c	Bright	*d	Dark
*e	Auxiliary Battery	*f	Mode Selection Lever
*g	Menu Switch	*h	Cursor Operation Switch
*i	Component without harness connected (Inner Rear View Mirror Assembly)	-	-

(1) Light up the mirror with an electric light, and check that the mirror surface changes from bright to dark.

OK:

Mirror surface changes from bright to dark.

If the result is not as specified, replace the inner rear view mirror assembly.

Post-procedure1

(f) None

