


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029Q7S
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: STEERING COLUMN: HEATED STEERING WHEEL SYSTEM: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

INSPECTION

PROCEDURE

1. INSPECT STEERING HEATER SWITCH

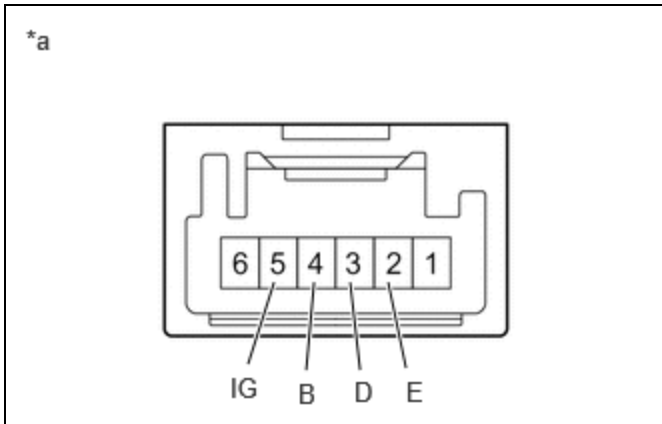

*a	Component without harness connected
----	-------------------------------------

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
5(IG) - 2(E)	Steering heater switch is pushed	Below 1 Ω	Ω
5(IG) - 2(E)	Steering heater switch is not pushed	10 kΩ or higher	kΩ

(b) Indicator Inspection

(1) Apply auxiliary battery voltage to the steering heater switch and check that the indicator illuminates.

OK:

CONDITION	SPECIFIED CONDITION
Auxiliary battery positive (+) → Terminal 3 (D) Auxiliary battery negative (-) → Terminal 4 (B)	Illuminates

