

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM1000000029SJ7
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: MAINTENANCE: FRONT WIPER RUBBER: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

REMOVAL

CAUTION / NOTICE / HINT


NOTICE:




Make sure to hold the front wiper arm while lifting it, as lifting the front wiper arm by the front wiper blade may damage or deform the front wiper blade.

HINT:

- The following procedure is for the LH side.
- Use the same procedure for the RH side and LH side.

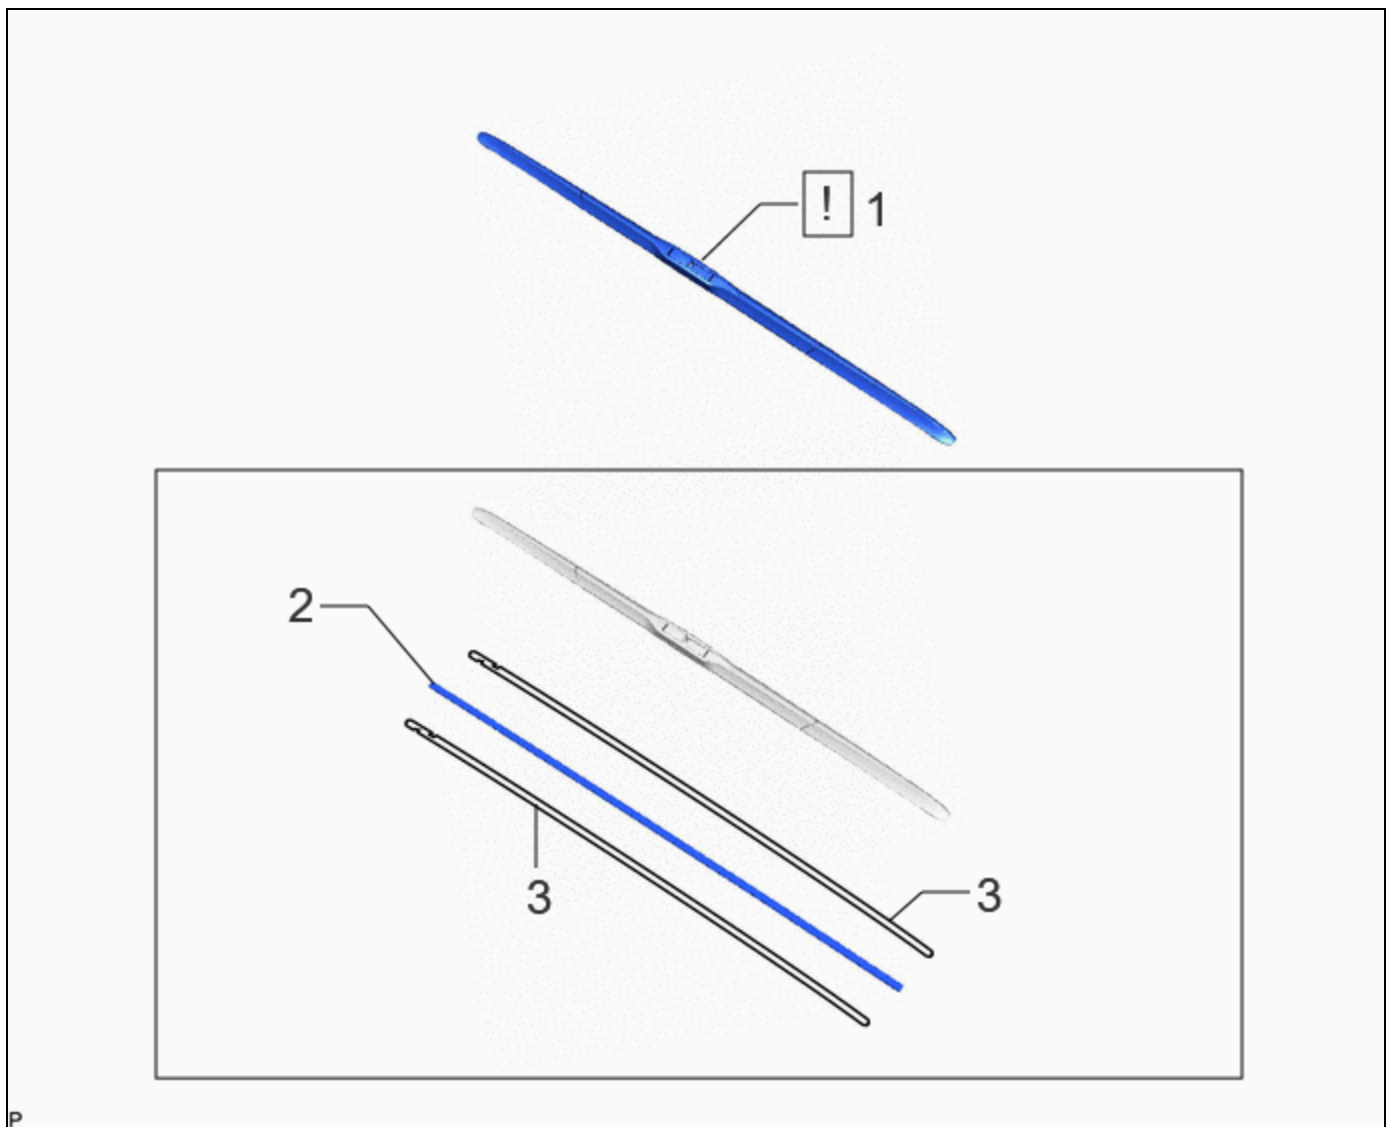COMPONENTS (REMOVAL)




PROCEDURE	PART NAME CODE			
1 FRONT WIPER BLADE LH	85222A	INFO	-	-
2 WIPER RUBBER LH	85214B	-	-	-
3 BACKING PLATE	-	-	-	-


CAUTION / NOTICE / HINT

PROCEDURE

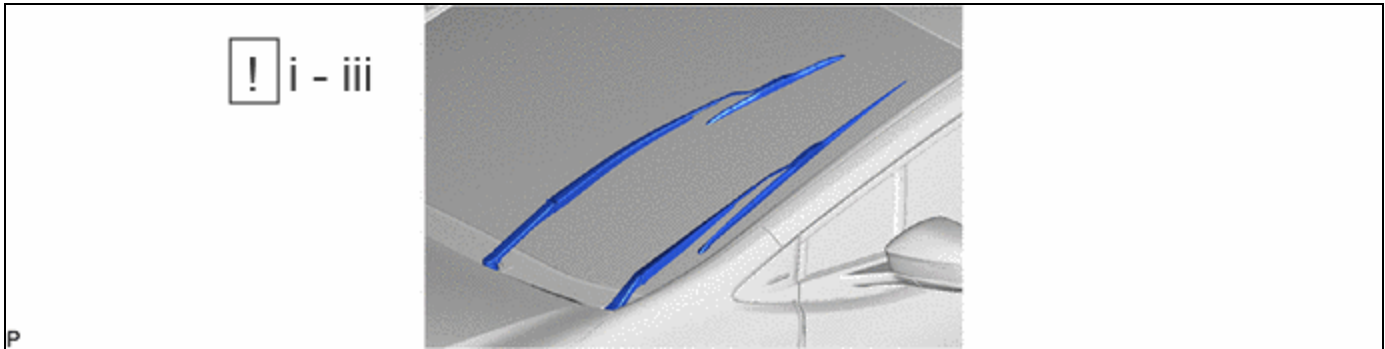

1. REMOVE FRONT WIPER BLADE LH

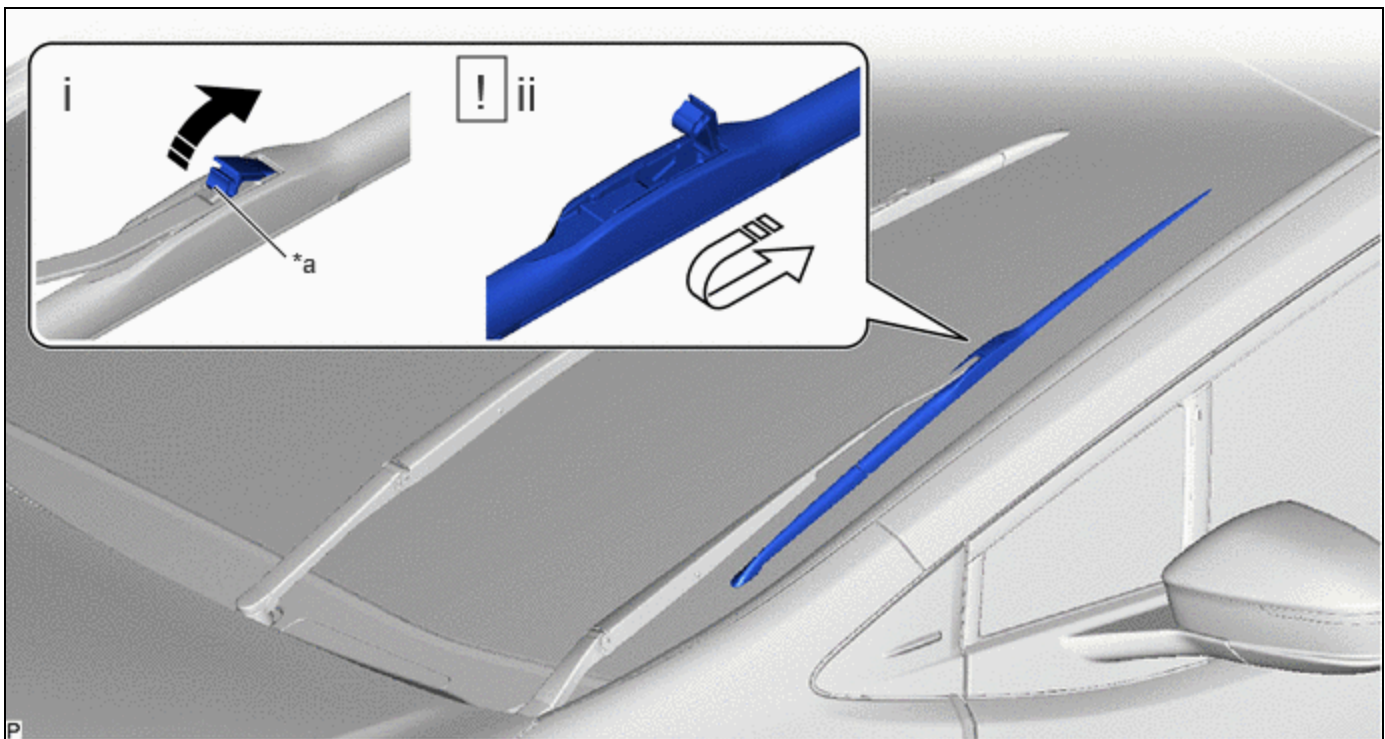

- (1) With the power switch on (IG), turn the power switch off.
- (2) Within 42 seconds of turning the power switch off, operate and hold the windshield wiper switch assembly MIST function for 2 seconds.
- (3) Check that the front wiper stops in the upper reverse position.



*a	Holder	-	-
----	--------	---	---


	Rotate in this Direction		Remove in this Direction
---	--------------------------	---	--------------------------


- (1) Pull up the holder of the front wiper blade LH as shown in the illustration.
- (2) Remove the front wiper blade LH from the front wiper arm as shown in the illustration.

NOTICE:


Place a piece of cloth between the front wiper arm and windshield glass to avoid damaging the windshield glass.


2. REMOVE WIPER RUBBER LH

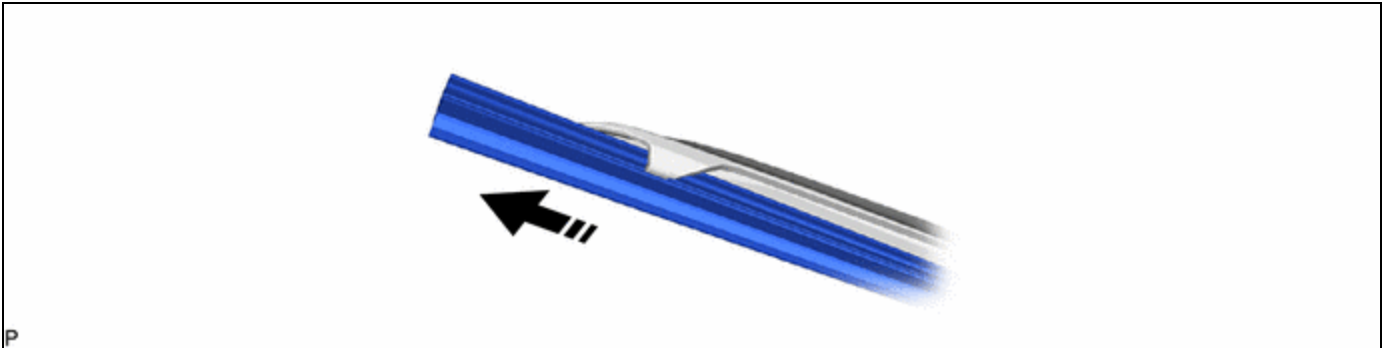

	Remove in this Direction	-	-
---	--------------------------	---	---

3. REMOVE BACKING PLATE

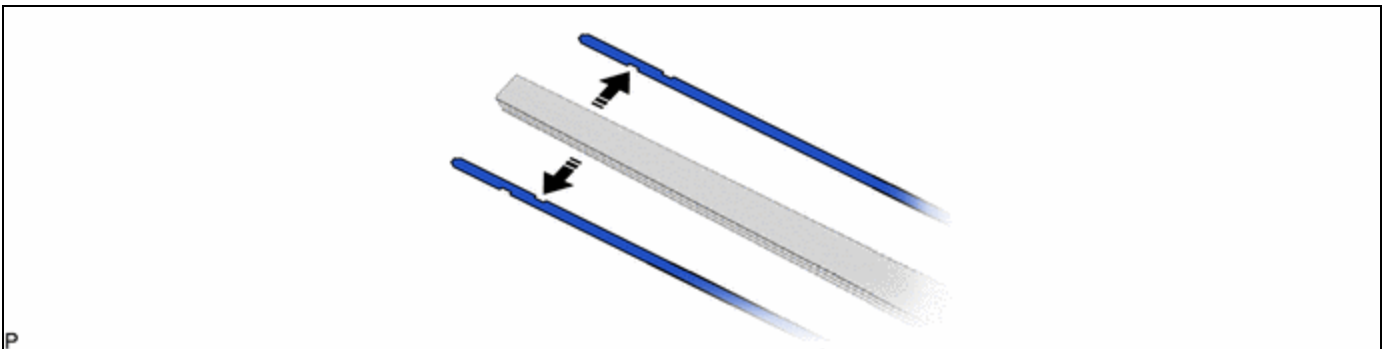

	Remove in this Direction	-	-
---	--------------------------	---	---

