

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002B3GN
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> POWER OUTLETS (INT): POWER OUTLET SOCKET (for Console Box Rear Side): INSPECTION; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

## INSPECTION

### PROCEDURE

#### 1. INSPECT CENTER POWER OUTLET SOCKET ASSEMBLY

(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:




[Click Location & Routing\(R35\)](#)

[Click Connector\(R35\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
A - R35-1 (VV+)	Always	Below 1 Ω
B - R35-4 (VV-)	Always	Below 1 Ω
R35-1 (VV+) - R35-4 (VV-)	Always	10 kΩ or higher

If the result is not as specified, replace the center power outlet socket assembly.

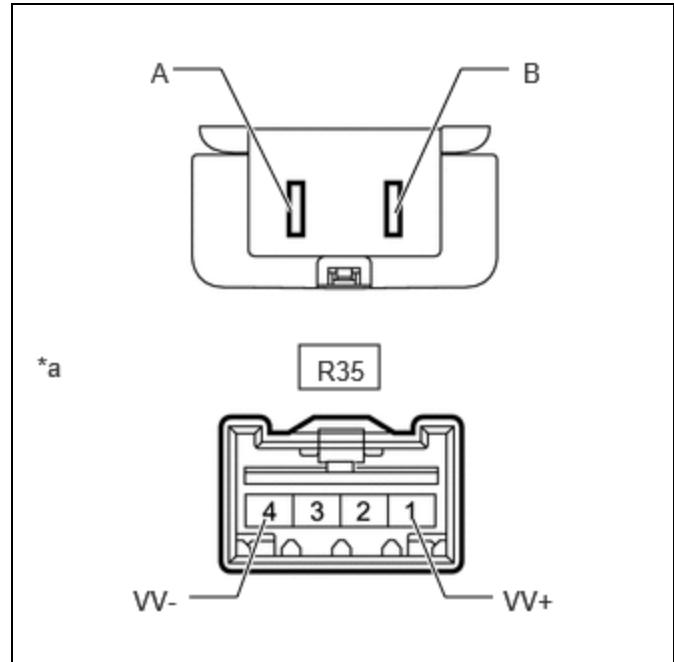

*a	Component without harness connected (Center Power Outlet Socket Assembly)
----	---

