



# Advanced Diagnostics

## DTC P0112: Intake Air Temperature (IAT) Sensor Circuit Low Voltage

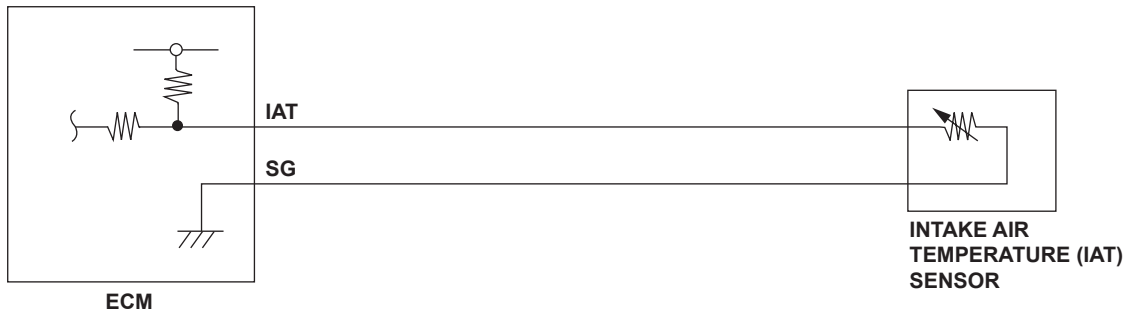

P0112-9602

### Intake Air Temperature (IAT) Sensor Output Voltage

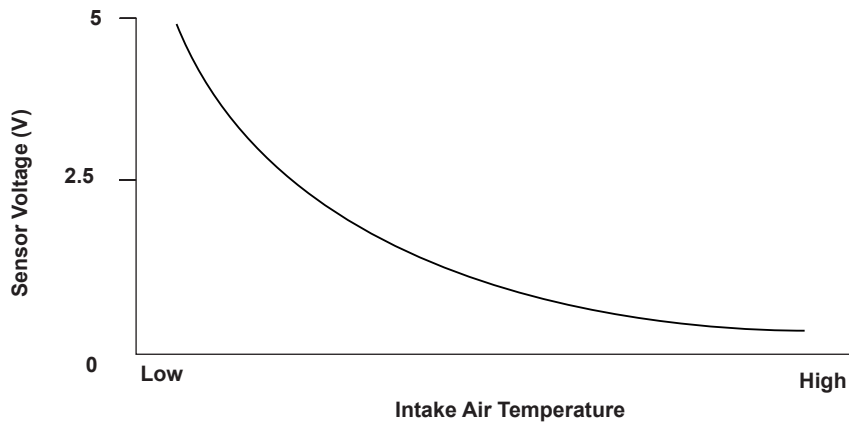

P0112-9671

### General Description

The intake air temperature (IAT) sensor is a thermistor that detects intake air temperature, and it is used for A/F feedback control to compensate for the atmospheric density fluctuations that accompany changes in intake air temperature. The IAT sensor resistance varies depending on temperature. The output voltage and the sensor resistance increase as the intake air temperature decreases. Conversely, the output voltage and the sensor resistance decrease as the intake air temperature increases. If the IAT sensor output voltage is excessively low, the engine control module (ECM) detects a malfunction and a DTC is stored.

## Monitor Execution, Sequence, Duration, DTC Type

Execution	Continuous
Sequence	None
Duration	2 seconds or more
DTC Type	One drive cycle, MIL ON

## Enable Conditions

Condition	
Ignition switch	ON
No active DTCs	IAT

## Malfunction Threshold

The IAT sensor output voltage is 0.08 V or less for at least 2 seconds.

## Diagnosis Details

### Conditions for illuminating the MIL

When a malfunction is detected, the MIL comes on and the DTC and the freeze frame data are stored in the ECM memory.

### Conditions for clearing the MIL

The MIL will be cleared if the malfunction does not recur during three consecutive trips in which the diagnostic runs. The MIL, the DTC, and the freeze frame data can be cleared by using the scan tool Clear command or by disconnecting the battery.