


Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028P3V
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: PARKING BRAKE: ELECTRIC PARKING BRAKE SYSTEM: C061011; Right Electric Parking Brake Actuator Control Circuit Short to Ground; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

DTC	C061011	Right Electric Parking Brake Actuator Control Circuit Short to Ground
------------	----------------	--

DESCRIPTION

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MEMORY	DTC OUTPUT FROM	PRIORITY	NOTE
C061011	Right Electric Parking Brake Actuator Control Circuit Short to Ground	<ul style="list-style-type: none"> • Diagnosis Condition: Electric parking brake not operating • Malfunction Status: The ECU power supply is normal but there is a malfunction in the electric parking brake actuator RH internal circuit (short to GND). • Detection Time: Approximately 1 second 	<ul style="list-style-type: none"> • Parking brake actuator assembly RH • No. 1 parking brake wire assembly • Wire harness and connector • No. 2 skid control ECU (brake actuator assembly) 	DTC stored	Brake/EPB	A	An electric parking brake system malfunction is displayed on the multi-information display.

WIRING DIAGRAM

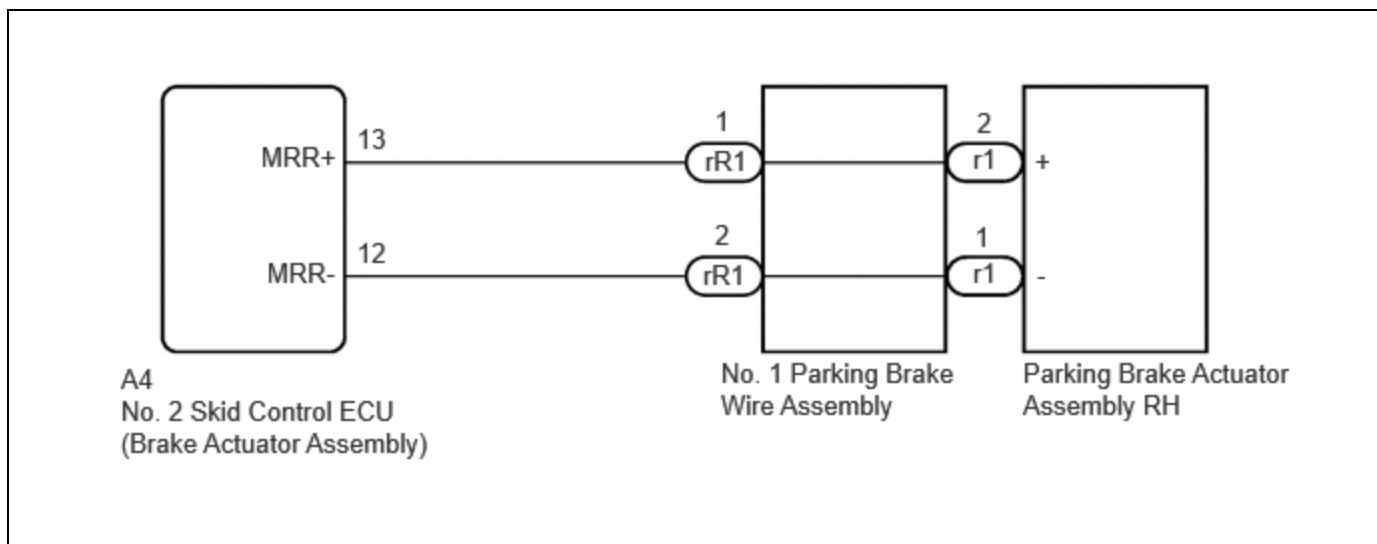

PROCEDURE

1. INSPECT NO. 1 PARKING BRAKE WIRE ASSEMBLY

Pre-procedure1

(a) Turn the ignition switch off.

Procedure1

(b) Make sure that there is no looseness at the locking part and the connecting part of the connectors.

OK:

The connector is securely connected.

Pre-procedure2

(c) Disconnect the rR1 and r1 No. 1 parking brake wire assembly connectors.

Procedure2


(d) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(e) Measure the resistance according to the value(s) in the table below.

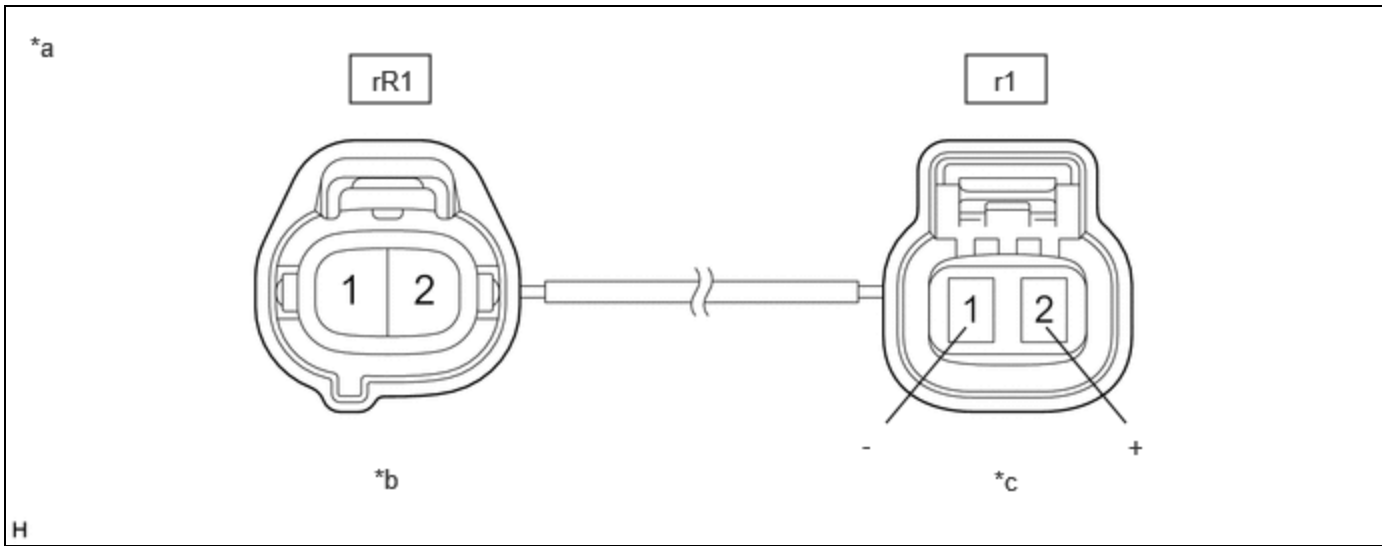

*a	Front view of No. 1 Parking Brake Wire Assembly	*b	to wire harness connector
*c	to Parking Brake Actuator Assembly RH	-	-

Standard Resistance:



[Click Location & Routing\(rR1,r1\)](#)

[Click Connector\(rR1\)](#)

[Click Connector\(r1\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
rR1-1 or r1-2 (+) - Body ground and other terminals	Always	10 kΩ or higher	kΩ
rR1-2 or r1-1 (-) - Body ground and other terminals	Always	10 kΩ or higher	kΩ

Post-procedure1

(f) None

NG ▶ REPLACE NO. 1 PARKING BRAKE WIRE ASSEMBLY

OK
▼

2.	CHECK HARNESS AND CONNECTOR (NO. 2 SKID CONTROL ECU (BRAKE ACTUATOR ASSEMBLY) - PARKING BRAKE ACTUATOR ASSEMBLY RH)
-----------	--

Pre-procedure1

(a) Turn the ignition switch off.

(b) Make sure the No. 1 parking brake wire assembly is securely installed.

(c) Disconnect the A4 No. 2 skid control ECU (brake actuator assembly) connector.

(d) Disconnect the r1 parking brake actuator assembly RH connector.

Procedure1

(e) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(A4,r1\)](#)

[Click Connector\(A4\)](#)

[Click Connector\(r1\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A4-13 (MRR+) or r1-2 (+) - Body ground	Always	10 kΩ or higher	kΩ
A4-12 (MRR-) or r1-1 (-) - Body ground	Always	10 kΩ or higher	kΩ

Post-procedure1

(f) None

NG ► REPAIR OR REPLACE HARNESS OR CONNECTOR

OK



3.	INSPECT PARKING BRAKE ACTUATOR ASSEMBLY RH
-----------	---

Click here [INFO](#)

OK ► REPLACE NO. 2 SKID CONTROL ECU (BRAKE ACTUATOR ASSEMBLY) [INFO](#)

NG ► REPLACE PARKING BRAKE ACTUATOR ASSEMBLY RH

