

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000028P3I
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: PARKING BRAKE: ELECTRIC PARKING BRAKE SYSTEM: C061013; Right Electric Parking Brake Actuator Control Circuit Open; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

DTC	C061013	Right Electric Parking Brake Actuator Control Circuit Open
------------	----------------	---

DESCRIPTION

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MEMORY	DTC OUTPUT FROM	PRIORITY	NOTE
C061013	Right Electric Parking Brake Actuator Control Circuit Open	<ul style="list-style-type: none"> • Diagnosis Condition: Electric parking brake not operating • Malfunction Status: The ECU power supply is normal but there is a malfunction in the electric parking brake actuator RH internal circuit (open). • Detection Time: Approximately 1 second 	<ul style="list-style-type: none"> • Parking brake actuator assembly RH • No. 1 parking brake wire assembly • Wire harness and connector • No. 2 skid control ECU (brake actuator assembly) 	DTC stored	Brake/EPB	A	An electric parking brake system malfunction is displayed on the multi-information display.

WIRING DIAGRAM

Click here [INFO](#)

PROCEDURE

1.	INSPECT NO. 1 PARKING BRAKE WIRE ASSEMBLY
-----------	--

Pre-procedure1

(a) Turn the ignition switch off.

Procedure1

(b) Make sure that there is no looseness at the locking part and the connecting part of the connectors.

OK:

The connector is securely connected.

Pre-procedure2

(c) Disconnect the rR1 and r1 No. 1 parking brake wire assembly connectors.

Procedure2


(d) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(e) Measure the resistance according to the value(s) in the table below.

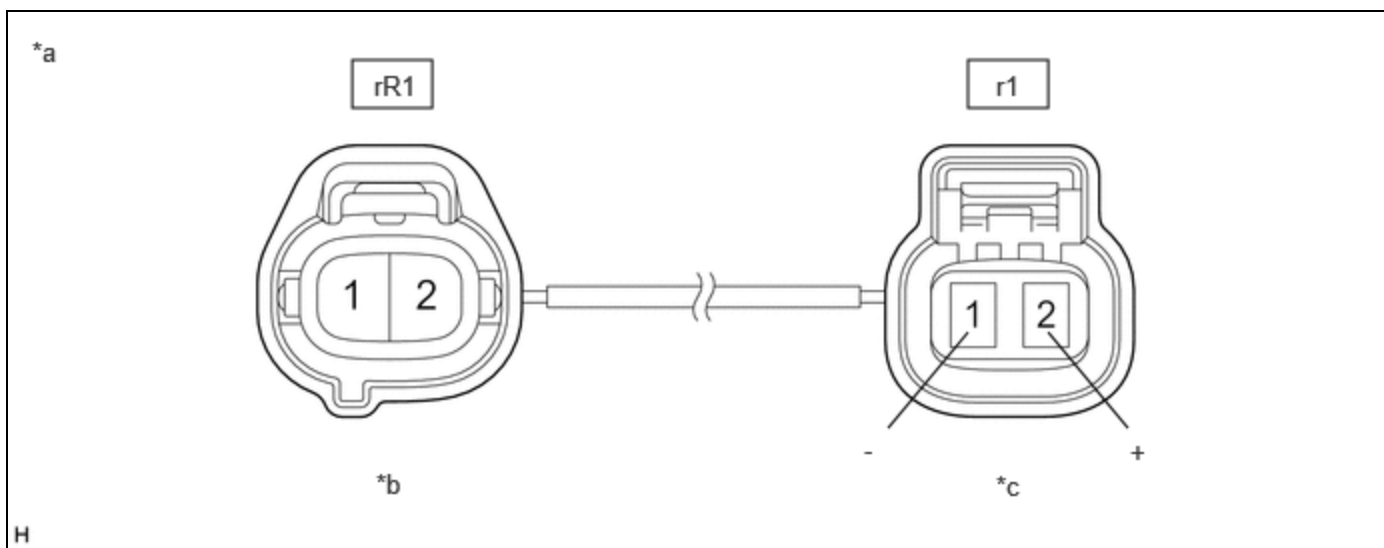

*a	Front view of No. 1 Parking Brake Wire Assembly	*b	to wire harness connector
*c	to Parking Brake Actuator Assembly RH	-	-

Standard Resistance:



[Click Location & Routing\(rR1,r1\)](#)

[Click Connector\(rR1\)](#)

[Click Connector\(r1\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
rR1-1 - r1-2 (+)	Always	Below 1 Ω	Ω
rR1-1 - Other terminals	Always	10 kΩ or higher	kΩ
rR1-2 - r1-1 (-)	Always	Below 1 Ω	Ω
rR1-2 - Other terminals	Always	10 kΩ or higher	kΩ

Post-procedure1

(f) None

NG  **REPLACE NO. 1 PARKING BRAKE WIRE ASSEMBLY****OK****2.****CHECK HARNESS AND CONNECTOR (NO. 2 SKID CONTROL ECU (BRAKE ACTUATOR ASSEMBLY) - PARKING BRAKE ACTUATOR ASSEMBLY RH)**

Pre-procedure1

- (a) Turn the ignition switch off.
- (b) Make sure the No. 1 parking brake wire assembly is securely installed.
- (c) Disconnect the A4 No. 2 skid control ECU (brake actuator assembly) connector.
- (d) Disconnect the r1 parking brake actuator assembly RH connector.

Procedure1

- (e) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

[Click Location & Routing\(A4,r1\).](#)[Click Connector\(A4\).](#)[Click Connector\(r1\).](#)



TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A4-13 (MRR+) - r1-2 (+)	Always	Below 1 Ω	Ω
A4-12 (MRR-) - r1-1 (-)	Always	Below 1 Ω	Ω

Post-procedure1

(f) None

NG  **REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****3.****INSPECT PARKING BRAKE ACTUATOR ASSEMBLY RH**

Click here 

OK  **REPLACE NO. 2 SKID CONTROL ECU (BRAKE ACTUATOR ASSEMBLY)** 

NG  **REPLACE PARKING BRAKE ACTUATOR ASSEMBLY RH**

