

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BLW4
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: M20A-FXS (ENGINE CONTROL): SFI SYSTEM: P03352A,P033531; Crankshaft Position Sensor "A" Signal Stuck in Range; 2023 - 2024 MY Prius Prius Prime [03/2023 -]		

DTC	P03352A	Crankshaft Position Sensor "A" Signal Stuck in Range
------------	----------------	---

DTC	P033531	Crankshaft Position Sensor "A" No Signal
------------	----------------	---

DESCRIPTION

Refer to DTC P033511.

Click here [INFO](#)

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	DTC OUTPUT FROM	PRIORITY	NOTE
P03352A	Crankshaft Position Sensor "A" Signal Stuck in Range	No crankshaft position sensor signal to the ECM while the engine is running (1 trip detection logic).	<ul style="list-style-type: none"> Open or short in crankshaft position sensor circuit Crankshaft position sensor Crankshaft position sensor plate ECM 	Comes on	Engine	A	SAE Code: P0335
P033531	Crankshaft Position Sensor "A" No Signal	The engine stalls and the engine speed signal value decreases rapidly (1 trip detection logic).	<ul style="list-style-type: none"> Open or short in crankshaft position sensor circuit Crankshaft position sensor Crankshaft position sensor plate ECM 	Comes on	Engine	A	SAE Code: P0335

Reference: Inspection using an oscilloscope.

Click here [INFO](#)

MONITOR DESCRIPTION

A DTC will be stored if any of the following occurs:

- The crankshaft position sensor signal (NE signal) is not received by the ECM when the engine is running.
- The engine stalls and the engine speed signal value decreases rapidly (under normal conditions the engine speed will decrease gradually).

MONITOR STRATEGY

Related DTCs	P0335: Crankshaft position sensor verify pulse input
Required Sensors/Components (Main)	Crankshaft position sensor
Required Sensors/Components (Related)	Camshaft position sensor
Frequency of Operation	Continuous
Duration	1.85 seconds: Case 1 15 seconds: Case 2
MIL Operation	Immediate
Sequence of Operation	None

TYPICAL ENABLING CONDITIONS

All

Both of the following conditions are met	-
Hybrid control module judge	Engine running
Lost communication with hybrid vehicle control ECU (U0293)	Not detected

P0335 (Case 1)

All of the following conditions are met	-
Auxiliary battery voltage	Higher than 6 V
Crankshaft position sensor voltage	0.3 to 4.7 V
Ignition switch	ON

P0335 (Case 2)

All of the following conditions are met	-
Auxiliary battery voltage	Higher than 6 V
Crankshaft position sensor voltage	0.3 to 4.7 V
Starter	Off
Engine speed (Top dead center)	600 rpm or higher
Engine speed (30°C)	600 rpm or higher

TYPICAL MALFUNCTION THRESHOLDS

P0335:

Crankshaft position sensor signal	No signal
-----------------------------------	-----------

CONFIRMATION DRIVING PATTERN

HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

Click here [INFO](#)

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

Click here [INFO](#)

1. Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
2. Turn the ignition switch off and wait for at least 30 seconds.
3. Put the engine in Inspection Mode (Maintenance Mode).

Click here [INFO](#)

4. Start the engine.
5. Idle the engine for 20 seconds or more [A].
6. Enter the following menus: Powertrain / Engine / Trouble Codes [B].
7. Read the pending DTCs.

HINT:

- If a pending DTC is output, the system is malfunctioning.
- If a pending DTC is not output, perform the following procedure.

8. Enter the following menus: Powertrain / Engine / Utility / All Readiness.
9. Input the DTC: P03352A or P033531.
10. Check the DTC judgment result.

HINT:

- If the judgment result is NORMAL, the system is normal.
- If the judgment result is ABNORMAL, the system has a malfunction.
- If the judgment result is INCOMPLETE, perform steps [A] through [B] again.
- [A] to [B]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- When clearing the permanent DTCs, do not disconnect the cable from the auxiliary battery terminal or attempt to clear the DTCs during this procedure, as doing so will clear the universal trip and normal judgment histories.

WIRING DIAGRAM

Refer to DTC P033511.

Click here [INFO](#)

CAUTION / NOTICE / HINT

NOTICE:

- Vehicle Control History may be stored in the hybrid vehicle control ECU if the engine is malfunctioning. Certain vehicle condition information is recorded when Vehicle Control History is stored. Reading the vehicle conditions recorded in both the freeze frame data and Vehicle Control History can be useful for troubleshooting.

for HEV Model: Click here [INFO](#)

for PHEV Model: Click here [INFO](#)

(Select Powertrain in Health Check and then check the time stamp data.)

- If any "Engine Malfunction" Vehicle Control History item has been stored in the hybrid vehicle control ECU, make sure to clear it. However, as all Vehicle Control History items are cleared simultaneously, if any Vehicle Control History items other than "Engine Malfunction" are stored, make sure to perform any troubleshooting for them before clearing Vehicle Control History.

for HEV Model: [Click here](#) INFO

for PHEV Model: [Click here](#) INFO

HINT:

- If no problem is found by this diagnostic troubleshooting procedure, check for problems by referring to the engine mechanical section.
- The engine speed can be checked by using the GTS. To perform the check, follow the procedures below:
 - a. Connect the GTS to the DLC3.
 - b. Turn the ignition switch to ON.
 - c. Turn the GTS on.
 - d. Put the engine in Inspection Mode (Maintenance Mode).

[Click here](#) INFO

- e. Start the engine.
- f. Enter the following menus: Powertrain / Engine / Data List / Engine Speed.

The engine speed may be indicated as zero despite the engine running normally. This is caused by a lack of NE signals from the crankshaft position sensor. Alternatively, the engine speed may be indicated as lower than the actual engine speed if the crankshaft position sensor output voltage is insufficient.


PROCEDURE

1.	READ VALUE USING GTS (ENGINE SPEED)
-----------	--

Pre-procedure1

- (a) Put the engine in Inspection Mode (Maintenance Mode).

Powertrain > Hybrid Control > Utility

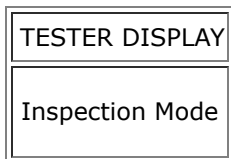


- (b) Start the engine.

Procedure1

- (c) Read the values displayed on the GTS while the engine is running.

Powertrain > Engine > Data List

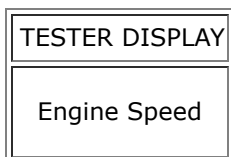

Standard:

Correct values are displayed.

HINT:

- To check the engine speed change, display the graph on the GTS.
- If the engine does not start, check the engine speed while cranking.
- If the engine speed indicated on the GTS remains at zero (0), there may be an open or short in the crankshaft position sensor circuit.

Post-procedure1

(d) None

OK  **CHECK FOR INTERMITTENT PROBLEMS**

NG



2.	CHECK HARNESS AND CONNECTOR
-----------	------------------------------------

HINT:

Make sure that the connector is properly connected. If it is not, securely connect it and check for DTCs again.

Pre-procedure1

- (a) Disconnect the crankshaft position sensor connector.
- (b) Turn the ignition switch to ON.

Procedure1

- (c) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(T3\)](#)

[Click Connector\(T3\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
T3-3 (VCNE) - Body ground	Ignition switch ON	4.5 to 5.5 V	V
T3-1 (NE+) - Body ground	Ignition switch ON	3.0 to 5.0 V	V

Post-procedure1

- (d) Turn the ignition switch off and wait for at least 30 seconds.

Pre-procedure2

(e) None

Procedure2

- (f) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(T3\)](#)

[Click Connector\(T3\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
T3-3 (VCNE) - T3-1 (NE+)	Ignition switch off	1.425 to 1.575 kΩ	kΩ
T3-2 (NE-) - Body ground	Ignition switch off	Below 1 Ω	Ω

Post-procedure2


(g) None

NG **GO TO STEP 5**

OK



3. CHECK SENSOR INSTALLATION AND CONDUCT VISUAL INSPECTION (CRANKSHAFT POSITION SENSOR)

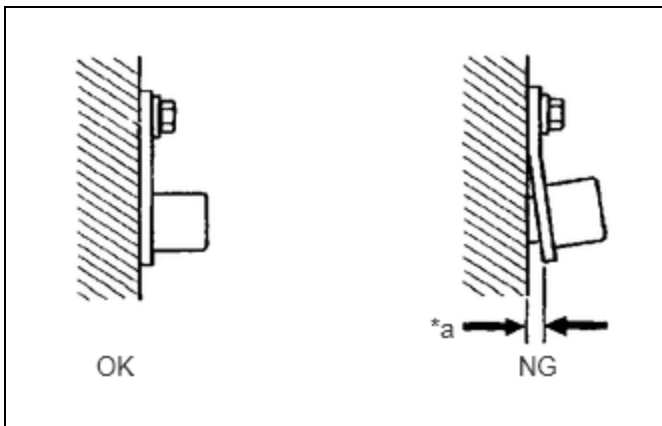

*a	Clearance
----	-----------

(a) Visually check the crankshaft position sensor for damage.

(b) Check the crankshaft position sensor installation condition.

OK:

The crankshaft position sensor does not have any damage and is installed properly.

NG **SECURELY REINSTALL CRANKSHAFT POSITION SENSOR**



4.	INSPECT CRANKSHAFT POSITION SENSOR PLATE (TEETH OF CRANKSHAFT POSITION SENSOR PLATE)
-----------	---

(a) Inspect the teeth of the crankshaft position sensor plate.

OK:

Crankshaft position sensor plate does not have any cracks or deformation.

OK ► REPLACE CRANKSHAFT POSITION SENSOR

NG ► REPLACE CRANKSHAFT POSITION SENSOR PLATE

5.	CHECK HARNESS AND CONNECTOR (CRANKSHAFT POSITION SENSOR - ECM)
-----------	---

Pre-procedure1

(a) Disconnect the crankshaft position sensor connector.

(b) Disconnect the ECM connector.

Procedure1

(c) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(T3,C52\).](#)

[Click Connector\(T3\).](#)

[Click Connector\(C52\).](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
T3-3 (VCNE) - C52-116 (VCNE)	Always	Below 1 Ω	Ω
T3-2 (NE-) - C52-115 (NE-)	Always	Below 1 Ω	Ω
T3-1 (NE+) - C52-93 (NE+)	Always	Below 1 Ω	Ω
T3-3 (VCNE) or C52-116 (VCNE) - Body ground and other terminals	Always	10 kΩ or higher	kΩ
T3-2 (NE-) or C52-115 (NE-) - Body ground and other terminals	Always	10 kΩ or higher	kΩ
T3-1 (NE+) or C52-93 (NE+) - Body ground and other terminals	Always	10 kΩ or higher	kΩ

Post-procedure1

(d) None

OK ► **REPLACE ECM**

NG ► **REPAIR OR REPLACE HARNESS OR CONNECTOR**

