

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM10000002BLYT
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [03/2023 - ]
<b>Title:</b> M20A-FXS (ENGINE CONTROL): SFI SYSTEM: P062712; Fuel Pump "A" Control Circuit Short to Battery; 2023 - 2024 MY Prius Prius Prime [03/2023 - ]		

<b>DTC</b>	<b>P062712</b>	<b>Fuel Pump "A" Control Circuit Short to Battery</b>
------------	----------------	---

## DESCRIPTION

The fuel pump control ECU performs PWM (Pulse Width Modulation) control to control the fuel pump (for low pressure side) speed steplessly over a wide range.

The fuel pump control ECU controls the speed of the fuel pump (for low pressure side) by switching the current of FPU, FPV and FPW based on operation signals output from the ECM.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	DTC OUTPUT FROM	PRIORITY	NOTE
P062712	Fuel Pump "A" Control Circuit Short to Battery	When the fuel pump control ECU operation duty ratio is 3 to 65%, the FPC terminal voltage is at a certain value or more for 3 seconds or more (1 trip detection logic).	<ul style="list-style-type: none"> <li>Short in fuel pump control ECU circuit</li> <li>Fuel pump control ECU</li> <li>Wire harness or connector</li> <li>ECM</li> </ul>	Comes on	Engine	A	SAE Code: P0629

### Related Data List

DTC NO.	DATA LIST
P062712	Fuel Pump Control Duty Ratio

## MONITOR DESCRIPTION

The ECM monitors the fuel pump control ECU operation signals.

When the output duty ratio of the operation signal from the ECM is 3 to 65% and the FPC terminal voltage is a certain value or more for 3 seconds or more, the ECM stores a DTC.

## MONITOR STRATEGY

Related DTCs	P0629: Fuel pump control circuit range check (high voltage)
Required Sensors/Components (Main)	Fuel pump control ECU
Required Sensors/Components (Related)	-
Frequency of Operation	Continuous

Duration	3 seconds
MIL Operation	Immediate
Sequence of Operation	None

## TYPICAL ENABLING CONDITIONS

Monitor runs whenever the following DTCs are not stored	None
All of the following conditions are met	-
Output duty cycle	3 to 65%
Auxiliary battery voltage	10.5 V or higher
Ignition switch	ON
Starter	Off

## TYPICAL MALFUNCTION THRESHOLDS

Fuel pump control module terminal voltage level	High for 0.3 seconds or more
---	------------------------------

## CONFIRMATION DRIVING PATTERN

### HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

[Click here](#) INFO

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

[Click here](#) INFO

1. Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
2. Turn the ignition switch off and wait for at least 30 seconds.
3. Put the engine in Inspection Mode (Maintenance Mode).

[Click here](#) INFO

4. Start the engine and wait 10 seconds or more [A].
5. Enter the following menus: Powertrain / Engine / Trouble Codes [B].
6. Read the pending DTCs.

### HINT:

- If a pending DTC is output, the system is malfunctioning.
- If a pending DTC is not output, perform the following procedure.

7. Enter the following menus: Powertrain / Engine / Utility / All Readiness.
8. Input the DTC: P062712.
9. Check the DTC judgment result.


### HINT:

- If the judgment result is NORMAL, the system is normal.
- If the judgment result is ABNORMAL, the system is malfunctioning.
- If the judgment result is INCOMPLETE, run the engine at an engine speed of 2000 rpm or more for 10 seconds or more and check the DTC judgment result again.
- [A] to [B]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- When clearing the permanent DTCs, do not disconnect the cable from the auxiliary battery terminal or attempt to clear the DTCs during this procedure, as doing so will clear the universal trip and normal judgment histories.

## WIRING DIAGRAM

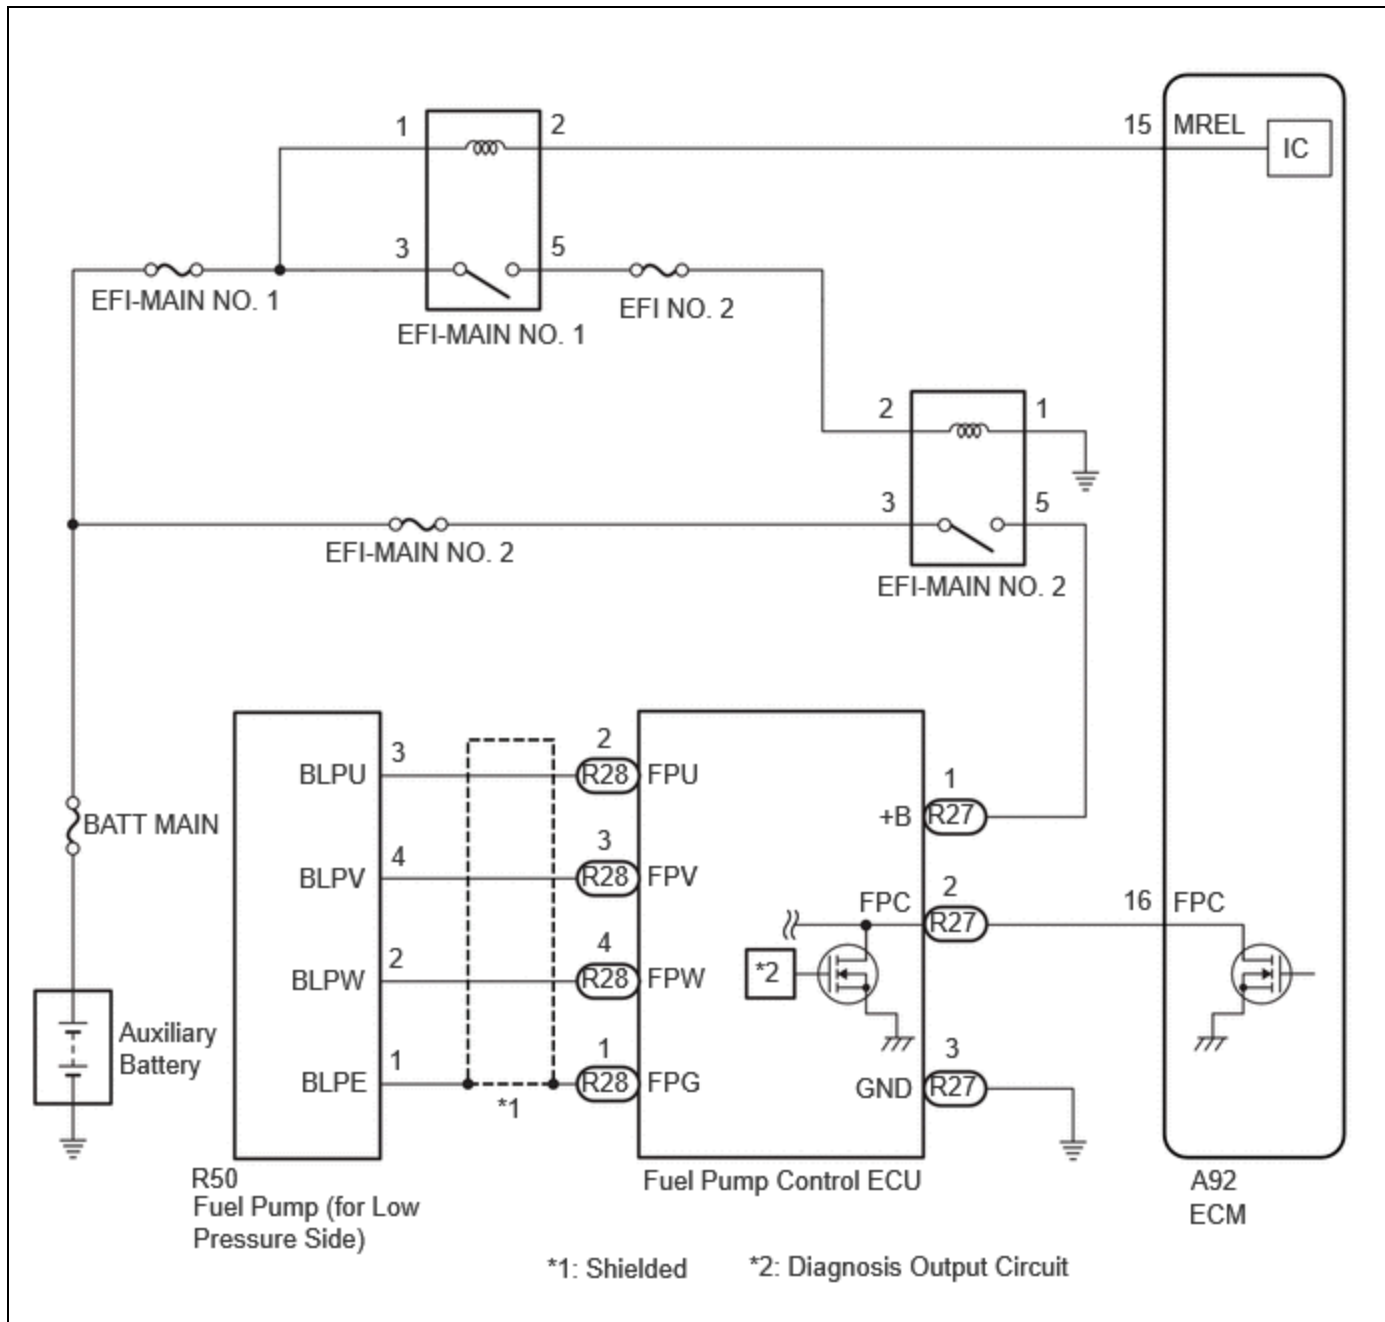

## CAUTION / NOTICE / HINT

### NOTICE:

- Vehicle Control History may be stored in the hybrid vehicle control ECU if the engine is malfunctioning. Certain vehicle condition information is recorded when Vehicle Control History is stored. Reading the vehicle conditions recorded in both the freeze frame data and Vehicle Control History can be useful for troubleshooting.

for HEV Model: [Click here](#) INFO

for PHEV Model: [Click here](#) INFO

(Select Powertrain in Health Check and then check the time stamp data.)

- If any "Engine Malfunction" Vehicle Control History item has been stored in the hybrid vehicle control ECU, make sure to clear it. However, as all Vehicle Control History items are cleared simultaneously, if any Vehicle Control History items other than "Engine Malfunction" are stored, make sure to perform any troubleshooting for them before clearing Vehicle Control History.

for HEV Model: [Click here](#) INFO

for PHEV Model: [Click here](#) INFO

## PROCEDURE

**1. INSPECT ECM (CHECK FOR SHORT)**

Pre-procedure1

- (a) Disconnect the fuel pump control ECU connector.
- (b) Turn the ignition switch to ON.

Procedure1

- (c) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(R27\)](#)

[Click Connector\(R27\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R27-2 (FPC) - Body ground	Ignition switch ON	Below 1 V	V

Post-procedure1

- (d) None.

**OK** ▶ **REPLACE FUEL PUMP CONTROL ECU**

**NG**



**2. CHECK HARNESS AND CONNECTOR (FUEL PUMP CONTROL ECU - ECM)**

Pre-procedure1

- (a) Disconnect the fuel pump control ECU connector.
- (b) Disconnect the ECM connector.

## Procedure1

(c) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(R27,A92\).](#)

[Click Connector\(R27\).](#)

[Click Connector\(A92\).](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R27-2 (FPC) or A92-16 (FPC) - Other terminals	Always	10 k $\Omega$ or higher	k $\Omega$

## Post-procedure1

(d) None.

**OK** ► REPLACE ECM

**NG** ► REPAIR OR REPLACE HARNESS OR CONNECTOR

