

|   |                           |                                      |
|---|---------------------------|--------------------------------------|
| <b>Last Modified:</b> 12-04-2024  | 6.11:8.1.0                | <b>Doc ID:</b> RM10000002BI30        |
| <b>Model Year Start:</b> 2023   | <b>Model:</b> Prius Prime | <b>Prod Date Range:</b> [03/2023 - ] |
| <b>Title:</b> HYBRID / BATTERY CONTROL: HYBRID CONTROL SYSTEM (for PHEV Model): U029187; Lost Communication with Gear Shift Control Module "B" Missing Message; 2023 - 2024 MY Prius Prime [03/2023 - ] |                           |                                      |

|            |                |  |
|------------|----------------|--|
| <b>DTC</b> | <b>U029187</b> | <b>Lost Communication with Gear Shift Control Module "B" Missing Message</b> |
|------------|----------------|--|

## DESCRIPTION

The hybrid vehicle control ECU transmits and receives signals via CAN communication to and from the shift control actuator ECU.

| DTC NO. | DETECTION ITEM  | DTC DETECTION CONDITION   | TROUBLE AREA  | MIL              | WARNING INDICATE                 | DTC OUTPUT FROM | PRIORITY | NOTE            |
|---------|---|---|---|------------------|----------------------------------|-----------------|----------|-----------------|
| U029187 | Lost Communication with Gear Shift Control Module "B" Missing Message | A CAN communication error between the hybrid vehicle control ECU and shift control actuator ECU (CAN communication system malfunction) occurs The hybrid vehicle control ECU cannot receive signals from the shift control actuator ECU<br><br>(1 trip detection logic) | <ul style="list-style-type: none"> <li>Shift control actuator assembly (shift control actuator ECU)</li> <li>Wire harness or connector</li> </ul> | Does not come on | Master Warning: Does not come on | Hybrid Control  | B        | SAE Code: U0291 |

## CONFIRMATION DRIVING PATTERN

### **HINT:**

After repair has been completed, clear the DTCs and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.


Click here [INFO](#)

1. Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
2. Turn the ignition switch off and wait for 2 minutes or more.
3. With ignition switch ON and wait for 2 minutes or more.
4. Enter the following menus: Powertrain / HV Battery / Utility / All Readiness.
5. Check the DTC judgment result.

### **HINT:**

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE, perform the normal judgment procedure again.

## WIRING DIAGRAM

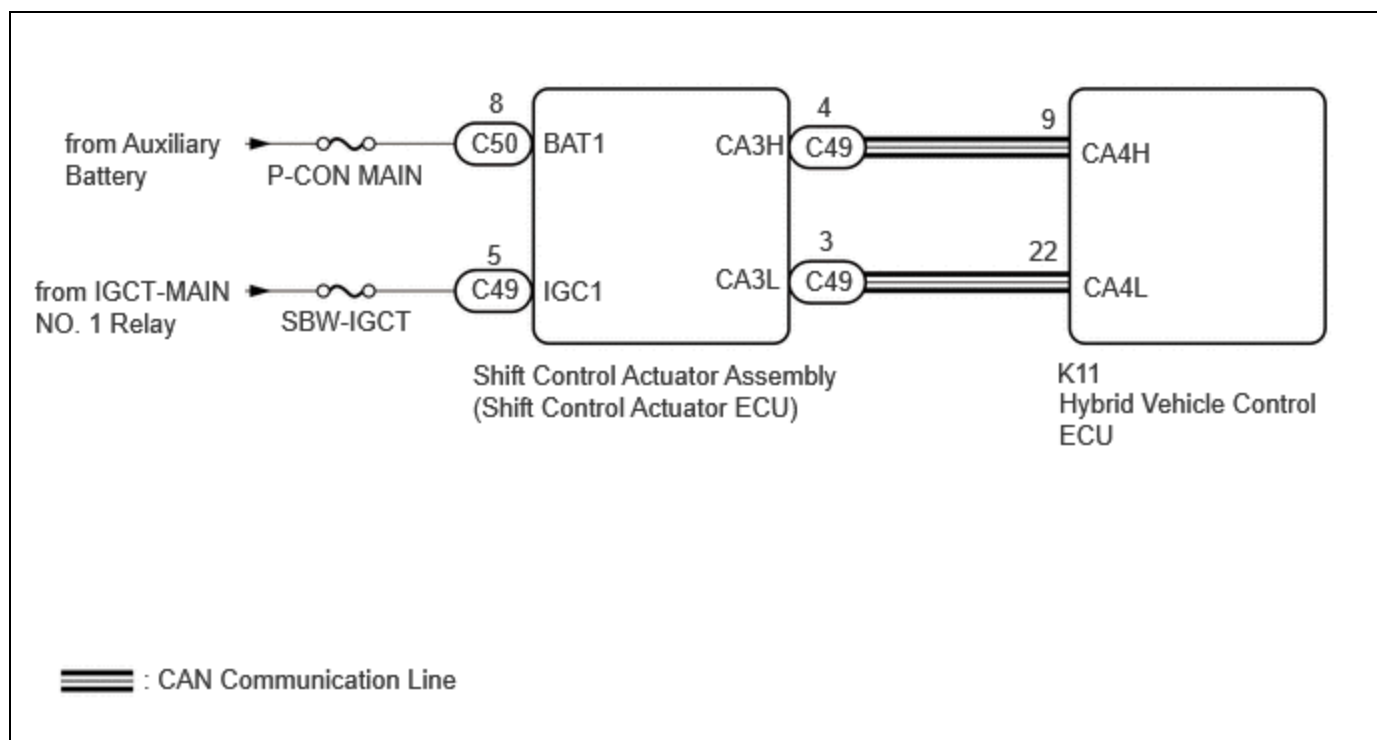

## CAUTION / NOTICE / HINT

### CAUTION:

Refer to the precautions before inspecting high voltage circuit.

Click here [INFO](#)

### NOTICE:

- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

Click here [INFO](#)

- When disconnecting and reconnecting the auxiliary battery

### HINT:

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

Click here [INFO](#)

- Ensure there is no power being supplied to the vehicle when disconnecting or reconnecting the connector of the shift control ECU or shift control actuator ECU, and when removing or installing the shift control ECU or shift control actuator ECU.

## PROCEDURE

### 1. CHECK DTC OUTPUT (HEALTH CHECK)

Pre-procedure1

(a) According to the display on the GTS, select "Health Check".

Procedure1

(b) Check for DTCs.

| RESULT              | PROCEED TO |
|---------------------|------------|
| No DTCs are output. | A          |
| DTCs are output.    | B          |

Post-procedure1

(c) Turn the ignition switch off.

**B**  **GO TO DTC CHART**

**A**



|           |  |
|-----------|--|
| <b>2.</b> | <b>CHECK DTC OUTPUT (HYBRID CONTROL)</b> |
|-----------|--|

Pre-procedure1

(a) None.

Procedure1


(b) Check for DTCs.

**Powertrain > Hybrid Control > Trouble Codes**

| RESULT                         | PROCEED TO |
|--------------------------------|------------|
| Only U029187 is output         | A          |
| U029187 and U117687 are output | B          |

Post-procedure1

(c) Turn the ignition switch off.

**B**  **SHIFT CONTROL ACTUATOR ASSEMBLY (SHIFT CONTROL ACTUATOR ECU) POWER SOURCE CIRCUIT FAILURE**

**A**



### 3. CHECK SHIFT CONTROL ACTUATOR ASSEMBLY (SHIFT CONTROL ACTUATOR ECU) (BAT1 TERMINAL VOLTAGE)

Pre-procedure1

(a) Disconnect the shift control actuator assembly (shift control actuator ECU) connector.

Procedure1

(b) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(C50\).](#)

[Click Connector\(C50\).](#)

| TESTER CONNECTION          | CONDITION           | SPECIFIED CONDITION | RESULT |
|----------------------------|---------------------|---------------------|--------|
| C50-8 (BAT1) - Body ground | Ignition switch off | 11 to 14 V          | V      |

#### HINT:

As there might be an intermittent malfunction, inspect the following items even if the measured voltage is as specified.

- Installation condition of fuse(s) (before removing fuse(s)) (BAT1 circuit)
- Fuse condition (before and after removing fuse(s)) (BAT1 circuit)
- Connection condition of connectors (BAT1 circuit)
- Wire harness condition (BAT1 circuit)
- Wire harness condition (GND circuit)

Post-procedure1

(c) Reconnect the shift control actuator assembly (shift control actuator ECU) connector.

**NG** **REPAIR OR REPLACE HARNESS OR CONNECTOR (SHIFT CONTROL ACTUATOR ASSEMBLY (SHIFT CONTROL ACTUATOR ECU) POWER SOURCE CIRCUIT)**

**OK**



### 4. CHECK SHIFT CONTROL ACTUATOR ASSEMBLY (SHIFT CONTROL ACTUATOR ECU) (IGC1 TERMINAL VOLTAGE)

Pre-procedure1

(a) Disconnect the shift control actuator assembly (shift control actuator ECU) connector.

## Procedure1

(b) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(C49\).](#)

[Click Connector\(C49\).](#)

| TESTER CONNECTION          | CONDITION           | SPECIFIED CONDITION | RESULT |
|----------------------------|---------------------|---------------------|--------|
| C49-5 (IGC1) - Body ground | Ignition switch off | 11 to 14 V          | V      |

**HINT:**

As there might be an intermittent malfunction, inspect the following items even if the measured voltage is as specified.

- Installation condition of fuse(s) (before removing fuse(s)) (IGC1 circuit)
- Fuse condition (before and after removing fuse(s)) (IGC1 circuit)
- Connection condition of connectors (IGC1 circuit)
- Wire harness condition (IGC1 circuit)
- Wire harness condition (GND circuit)

## Post-procedure1

(c) Turn the ignition switch off.

(d) Reconnect the shift control actuator assembly (shift control actuator ECU) connector.

**OK** ► **GO TO CAN COMMUNICATION SYSTEM**

**NG** ► **REPAIR OR REPLACE HARNESS OR CONNECTOR  
(SHIFT CONTROL ACTUATOR ASSEMBLY (SHIFT  
CONTROL ACTUATOR ECU) POWER SOURCE CIRCUIT)**

