

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029X3E
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: SEAT: FRONT POWER SEAT CONTROL SYSTEM (w/ Memory): B265396; Lifter Sensor (Motor) Component Internal Failure; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		


DTC	B265396	Lifter Sensor (Motor) Component Internal Failure
------------	----------------	---

DESCRIPTION

When the position control ECU assembly LH does not receive a lifter motor position sensor signal despite the seat having been moved upward or downward by power seat motor operation, this DTC is stored.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	DTC OUTPUT FROM	PRIORITY
B265396	Lifter Sensor (Motor) Component Internal Failure	Lifter motor position sensor signal not received when power seat moved upward or downward	<ul style="list-style-type: none"> Position control ECU assembly LH Lifter motor (power seat lifter motor assembly LH) Wire harness or connector 	Driver Seat	A

WIRING DIAGRAM

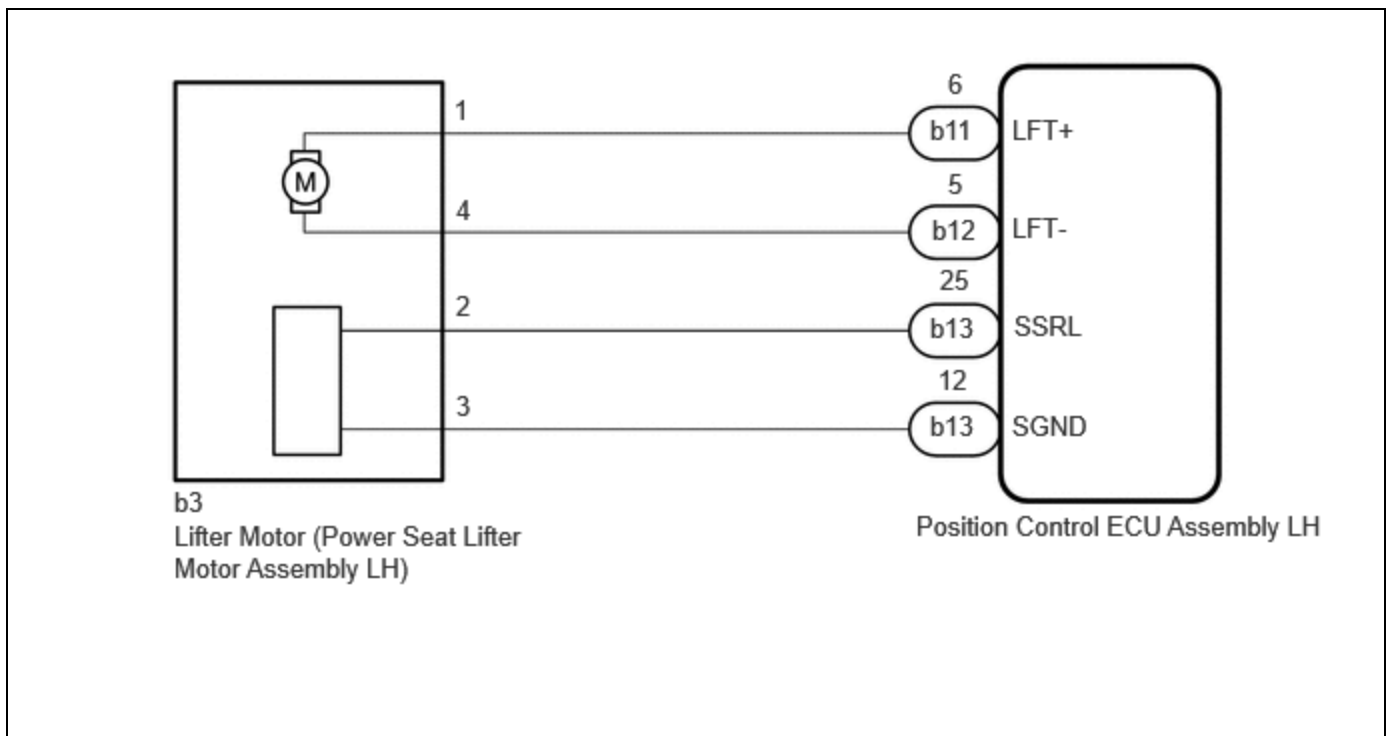

CAUTION / NOTICE / HINT

NOTICE:

- Make sure to initialize the position control ECU assembly LH after replacing the position control ECU assembly LH, seat assembly or any related parts (including removal and installation).

Click here [INFO](#)

- Initializing the position control ECU assembly LH will clear the seat position memory.

PROCEDURE

1.	CLEAR DTC
-----------	------------------

(a) Clear the DTCs.

Body Electrical > Driver Seat > Clear DTCs

NEXT



2.	CHECK FOR DTC
-----------	----------------------

(a) Check for DTCs.

Body Electrical > Driver Seat > Trouble Codes

RESULT	PROCEED TO
B265396 is not output	A
B265396 is output	B

A **USE SIMULATION METHOD TO CHECK**

B




3.	PERFORM ACTIVE TEST USING GTS
-----------	--------------------------------------

(a) Perform the Active Test according to the display on the GTS.

Body Electrical > Driver Seat > Active Test

TESTER DISPLAY	MEASUREMENT ITEM	CONTROL RANGE	DIAGNOSTIC NOTE
Lifter Motor	Seat lifter operation	Up/Down	-

Body Electrical > Driver Seat > Active Test

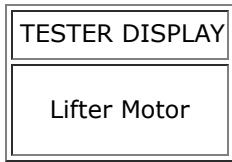

OK:
Lifter motor operates normally.

NG **GO TO STEP 7**

OK

4. CHECK POSITION CONTROL ECU ASSEMBLY LH

Pre-procedure1

(a) Disconnect the b3 lifter motor (power seat lifter motor assembly LH) connector.

Procedure1

(b) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(b3\).](#)

[Click Connector\(b3\).](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
b3-2 - b3-3	Lifter switch on	4.8 to 5.1 V	V

Post-procedure1

(c) None

NG **GO TO STEP 6**

OK

5. CHECK LIFTER MOTOR (POWER SEAT LIFTER MOTOR ASSEMBLY LH)

Pre-procedure1

(a) Reconnect the b3 lifter motor (power seat lifter motor assembly LH) connector.

Procedure1


(b) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(b3\)](#)

[Click Connector\(b3\)](#)

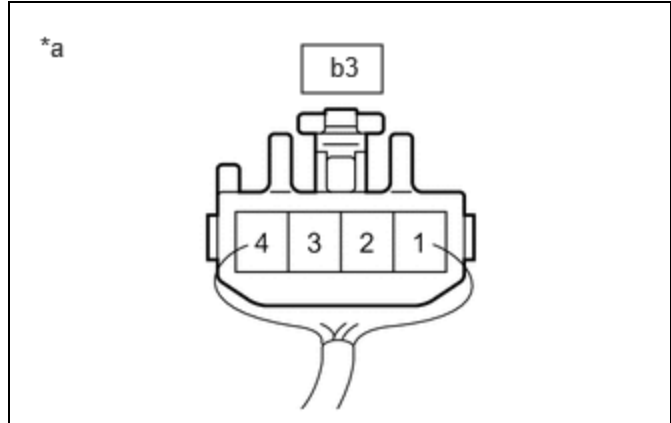

*a Component with harness connected (Lifter Motor (Power Seat Lifter Motor assembly LH))

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
b3-2 - Body ground	Lifter motor operating	4.5 to 4.8 V	V

Result:

PROCEED TO
OK
NG

Post-procedure1

(c) None

OK ▶ REPLACE POSITION CONTROL ECU ASSEMBLY LH INFO

NG ▶ REPLACE LIFTER MOTOR (POWER SEAT LIFTER MOTOR ASSEMBLY LH) INFO

6.	CHECK HARNESS AND CONNECTOR (POSITION CONTROL ECU ASSEMBLY LH - LIFTER MOTOR (POWER SEAT LIFTER MOTOR ASSEMBLY LH))
-----------	--

Pre-procedure1

(a) Disconnect the b13 position control ECU assembly LH connector.

Procedure1

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(b13,b3\)](#)

[Click Connector\(b13\)](#)

[Click Connector\(b3\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
b13-25 (SSRL) - b3-2	Always	Below 1 Ω	Ω
b13-25 (SSRL) or b3-2 - Body ground	Always	10 k Ω or higher	k Ω
b13-12 (SGND) - b3-3	Always	Below 1 Ω	Ω
b13-12 (SGND) or b3-3 - Body ground	Always	10 k Ω or higher	k Ω

Post-procedure1

(c) None

OK **REPLACE POSITION CONTROL ECU ASSEMBLY LH**

NG **REPAIR OR REPLACE HARNESS OR CONNECTOR**

7. INSPECT LIFTER MOTOR (POWER SEAT LIFTER MOTOR ASSEMBLY LH)

HINT:

[Click here](#)

NG **REPLACE LIFTER MOTOR (POWER SEAT LIFTER MOTOR ASSEMBLY LH)**

OK



8. CHECK HARNESS AND CONNECTOR (POSITION CONTROL ECU ASSEMBLY LH - LIFTER MOTOR (POWER SEAT LIFTER MOTOR ASSEMBLY LH))

Pre-procedure1

(a) Disconnect the b11 and b12 position control ECU assembly LH connectors.

Procedure1

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(b11,b3,b12\)](#)

[Click Connector\(b11\)](#)

[Click Connector\(b3\)](#)

[Click Connector\(b12\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
b11-6 (LFT+) - b3-1	Always	Below 1 Ω	Ω
b11-6 (LFT+) or b3-1 - Body ground	Always	10 k Ω or higher	k Ω
b12-5 (LFT-) - b3-4	Always	Below 1 Ω	Ω
b12-5 (LFT-) or b3-4 - Body ground	Always	10 k Ω or higher	k Ω

Post-procedure1

(c) None

OK  **REPLACE POSITION CONTROL ECU ASSEMBLY LH**

[INFO](#)

NG  **REPAIR OR REPLACE HARNESS OR CONNECTOR**

