


# Advanced Diagnostics

## DTC P0325: Knock Sensor (KS) Circuit Malfunction

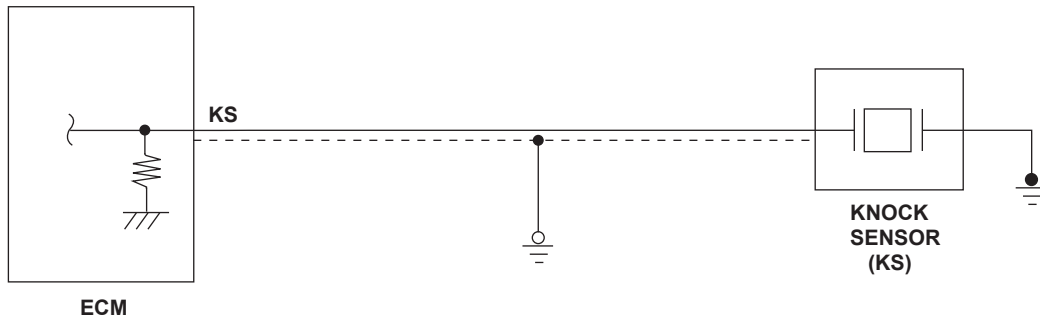

P0325-0001

### General Description

The knock sensor is mounted on the cylinder block and detects engine knocking. The vibration caused by knocking are converted into electrical signals through the piezo ceramic element. The engine control module (ECM) controls the ignition timing based on the electrical signals. If the signal from the knock sensor do not vary for a set time period, the ECM detects a malfunction and stores a DTC.

### Monitor Execution, Sequence, Duration, DTC Type

Execution	Continuous
Sequence	None
Duration	5 seconds or more
DTC Type	One drive cycle, MIL ON

### Enable Conditions

Condition	Minimum	Maximum
Engine speed	1,700 rpm	—
Engine coolant temperature	—	140°F (60°C)
No active DTCs	KS, CKP, TDC, MAP, ECT, CYP, IAT, VTEC System	

### Malfunction Threshold

No signals from the KS are detected for at least 5 seconds.

### Diagnosis Details

#### Conditions for illuminating the MIL

When a malfunction is detected, the MIL comes on and the DTC and the freeze frame data are stored in the ECM memory.

#### Conditions for clearing the MIL

The MIL will be cleared if the malfunction does not recur during three consecutive trips in which the diagnostic runs. The MIL, the DTC, and the freeze frame data can be cleared by using the scan tool Clear command or by disconnecting the battery.