


Advanced Diagnostics

DTC P1163: Air/Fuel Ratio (A/F) Sensor (Sensor 1) Slow Response

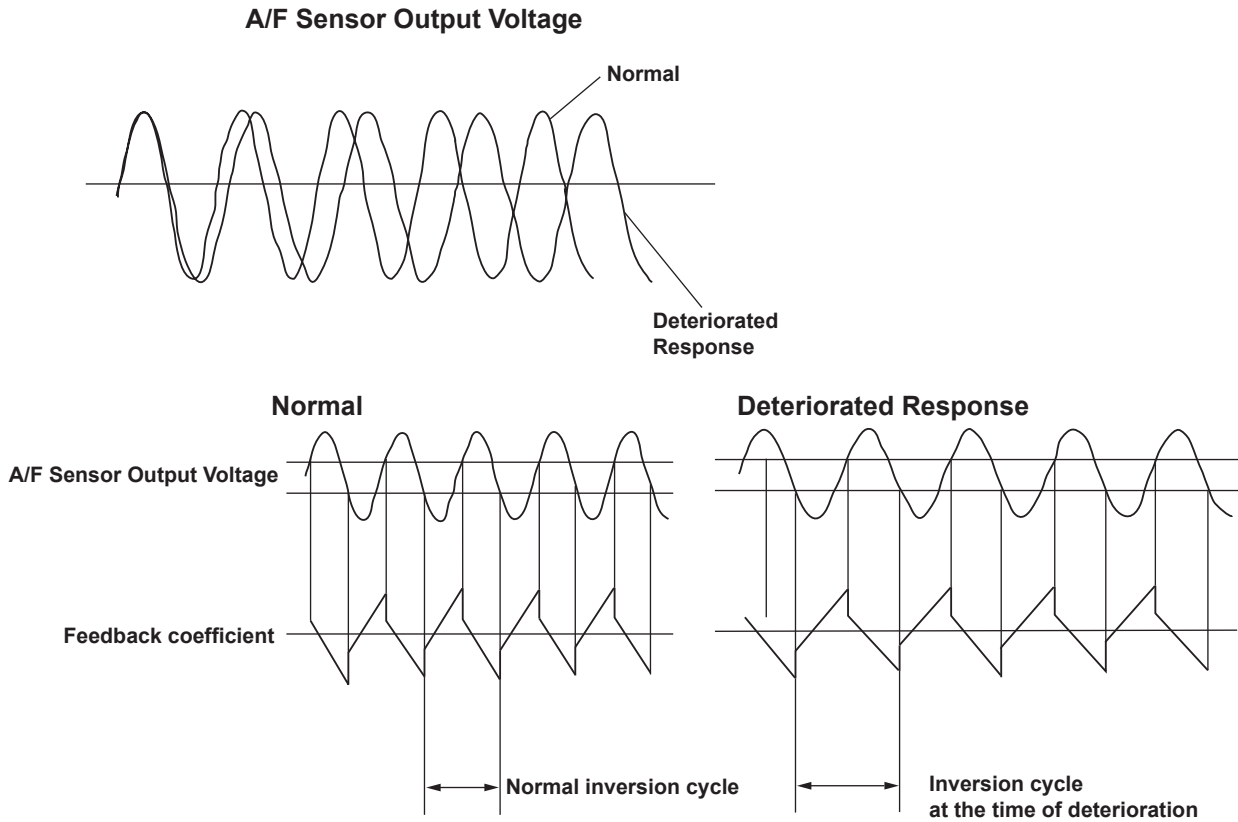

P1163-9871

General Description

The air/fuel ratio (A/F) sensor has a linear signal output in relation to the oxygen concentration. The engine control module (ECM) computes the air/fuel ratio from A/F sensor output voltage and uses the fuel feedback control to improve exhaust emissions. The ECM measures the inversion cycle of the A/F sensor output voltage during closed loop control of the stoichiometric ratio, detects a deteriorated response, and stores a DTC if the inversion cycle has extended to a specified time period or more.

Monitor Execution, Sequence, Duration, DTC Type

Execution	Once per driving cycle
Sequence	None
Duration	14 seconds or more
DTC Type	Two drive cycles, MIL ON

Enable Conditions

Condition		Minimum	Maximum
Engine coolant temperature		140°F (60°C)	—
Intake air temperature		-14°F (-25°C)	—
Engine speed		1,300 rpm	2,700 rpm
MAP value	1,300 rpm	38 kPa (285 mmHg, 11.3 in.Hg)* ¹	90 kPa (680 mmHg, 26.7 in.Hg)* ¹
		48 kPa (360 mmHg, 14.2 in.Hg)* ²	94 kPa (710 mmHg, 27.9 in.Hg)* ²
	2,200 rpm* ¹	32 kPa (235 mmHg, 9.3 in.Hg)	90 kPa (680 mmHg, 26.7 in.Hg)
	2,250 rpm* ²	42 kPa (310 mmHg, 12.3 in.Hg)	
Vehicle speed		35 mph (55 km/h)	—
Fuel trim		0.65	1.40
Fuel feedback		Closed loop at stoichiometric	
Monitoring priority		EVAP, Catalyst System	
No active DTCs		ECM, A/F Sensor, A/F Sensor Heater, Secondary HO ₂ S, Secondary HO ₂ S Heater, MAP, CKP, ECT, TP* ² , EGR, BARO, VSS, VTEC System, Fuel System, A/T System* ²	
Other		Other than when there is excessive vapor generation (fuel level is 40 - 80%)	


*1: M/T

*2: CVT

Malfunction Threshold

The average of at least six periods of the A/F sensor inversion cycle is 2.3 seconds or longer, or the average of average six periods of the A/F sensor inversion cycle detected for 10 seconds is 2.3 seconds or longer.

Driving Pattern

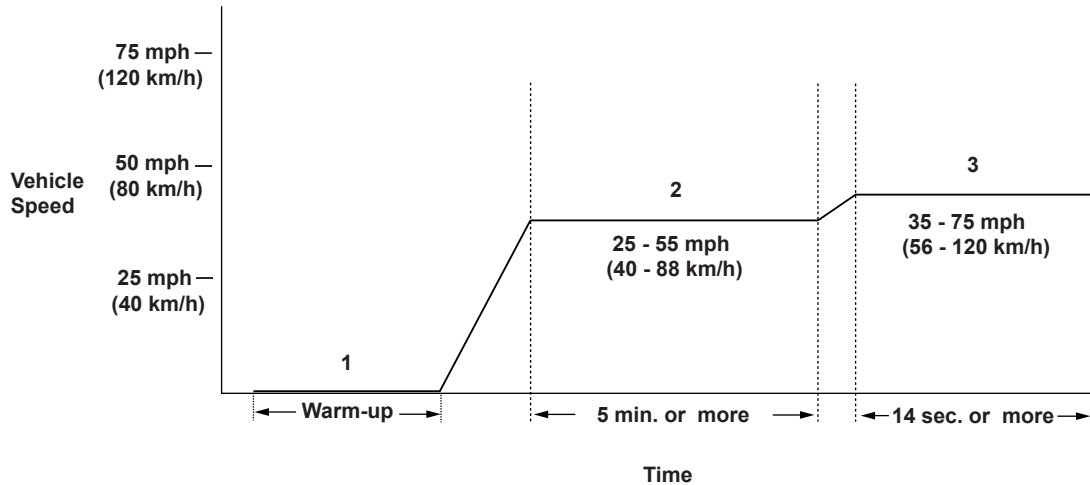

P1163-0171

1. Start the engine. Hold the engine at 3,000 rpm with no load (in park or neutral) until the radiator fan comes on.
2. Drive the vehicle at a steady speed between 25 - 55 mph (40 - 88 km/h) for at least 5 minutes.
3. Then, drive immediately at a steady speed between 35 - 75 mph (56 - 120 km/h) for at least 14 seconds.

- If the EVAP monitor runs instead of the HO₂S monitor, turn the engine off, then restart it, and the HO₂S monitor will restart.
- If you have difficulty duplicating the DTC, retest after turning off electrical components such as the audio system and A/C, and try a different gear position.
- Drive the vehicle in this manner only if the traffic regulations and ambient conditions allow.

Diagnosis Details

Conditions for illuminating the MIL

When a malfunction is detected during the first drive cycle, a Temporary DTC is stored in the ECM memory. If the malfunction recurs during the next (second) drive cycle, the MIL comes on and the DTC and the freeze frame data are stored.

Conditions for clearing the MIL

The MIL will be cleared if the malfunction does not recur during three consecutive trips in which the diagnostic runs.

The MIL, the DTC, the Temporary DTC, and the freeze frame data can be cleared by using the scan tool Clear command or by disconnecting the battery.