


Advanced Diagnostics

DTC P1366: Top Dead Center (TDC) Sensor 2 Intermittent Interruption

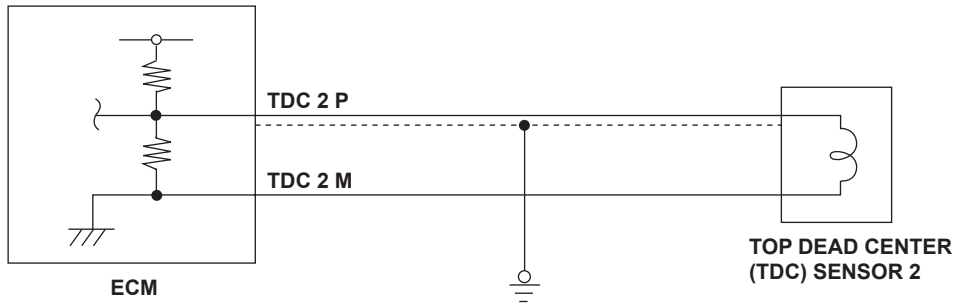

P1366-0001

General Description

The top dead center (TDC) sensor consists of a rotor and a pick-up coil that detects rotor position. When the rotor turns after starting the engine, the changes of magnetic flux in the pick-up coil are converted into pulsing signals to the engine control module (ECM). The TDC sensor detects the top dead center of each cylinder for fuel injection.

If TDC sensor pulsing signals are detected an abnormal number of times due to noise, a malfunction is detected and a DTC is stored.

Monitor Execution, Sequence, Duration, DTC Type

Execution	Continuous
Sequence	None
Duration	—
DTC Type	One drive cycle, MIL ON

Enable Conditions

Condition	Minimum	Maximum
Engine speed	500 rpm	—
No active DTCs	CKP, TDC 2	

Malfunction Threshold

The CKP sensor outputs more or less than eight pulses for each TDC sensor 2 pulse 30 times in succession.

Diagnosis Details

Conditions for illuminating the MIL

When a malfunction is detected, the MIL comes on and the DTC and the freeze frame data are stored in the ECM memory.

Conditions for clearing the MIL

The MIL will be cleared if the malfunction does not recur during three consecutive trips in which the diagnostic runs.

The MIL, the DTC, and the freeze frame data can be cleared by using the scan tool Clear command or by disconnecting the battery.