

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000028X3F
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> BRAKE CONTROL / DYNAMIC CONTROL SYSTEMS: ELECTRONICALLY CONTROLLED BRAKE SYSTEM: C051223; Right Rear Wheel Speed Sensor Signal Stuck Low; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

<b>DTC</b>	<b>C051223</b>	<b>Right Rear Wheel Speed Sensor Signal Stuck Low</b>
------------	----------------	---

## DESCRIPTION

Refer to DTC C051212.

Click here [INFO](#)

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	DTC OUTPUT FROM	PRIORITY	NOTE
C051223	Right Rear Wheel Speed Sensor Signal Stuck Low	Any of the following is detected: <ul style="list-style-type: none"> <li>When the +BS terminal voltage is 17.4 V or less at a vehicle speed of 10 km/h (6 mph) or more, output voltage from one of the speed sensors is less than that from the other sensors for 15 seconds or more.*2</li> </ul>	<ul style="list-style-type: none"> <li>Rear speed sensor RH*1</li> <li>Rear speed sensor RH (rear axle hub and bearing assembly RH)*2</li> <li>Rear speed sensor installation</li> <li>Skid control sensor wire RH (No. 1 parking brake wire assembly)</li> <li>Wire harness and connector</li> <li>Rear speed sensor rotor RH (rear axle hub and</li> </ul>	Comes on	Brake/EPB	A	<ul style="list-style-type: none"> <li>SAE Code: C0513 (Case 1 to 3 and 5)</li> <li>Output ECU: No. 2 skid control ECU (brake actuator assembly)</li> </ul>

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	DTC OUTPUT FROM	PRIORITY	NOTE
		<ul style="list-style-type: none"> <li>• When the +BS terminal voltage is 17.4 V or less at a vehicle speed of 10 km/h (6 mph) or more, output voltage from one of the speed sensors is less than that from the other sensors for 30 seconds or more.*1</li> <li>• When the +BS terminal voltage is 17.4 V or less at a vehicle speed of 10 km/h (6 mph) or more, output from one of the speed sensors is 0 km/h (0 mph) for 1</li> </ul>	bearing assembly RH)				

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	DTC OUTPUT FROM	PRIORITY	NOTE
		<p>second or more.</p> <ul style="list-style-type: none"> <li>• When the +BS terminal voltage is 17.4 V or less at a vehicle speed of 10 km/h (6 mph) or more, outputs from both rear speed sensors are 0 km/h (0 mph) for 15 seconds or more.*2</li> <li>• When the +BS terminal voltage is 17.4 V or less at a vehicle speed of 10 km/h (6 mph) or more, outputs from both rear speed sensors are 0 km/h (0 mph) for 30 seconds</li> </ul>					

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	DTC OUTPUT FROM	PRIORITY	NOTE
		<p>or more.*1</p> <ul style="list-style-type: none"> <li>A vehicle speed is 30 km/h (19 mph) or more and the rotation direction of one of the wheels is different from those of other 3 wheels as well as it is not detected for 3 second or more.</li> </ul>					

\*1: for AWD

\*2: for 2WD

## MONITOR DESCRIPTION

### **C0513 (Case 1 to 3):**

When the vehicle is being driven, if the value of the speed sensor which is outputting the lowest vehicle speed is significantly lower than the values of the other speed sensors, or the value of the speed sensor which is outputting the lowest vehicle speed is 0 km/h (0 mph), the No. 2 skid control ECU (brake actuator assembly) judges that the speed sensor is malfunctioning and illuminates the MIL and stores this DTC.

Also, when a wheel speed is being output (the wheel is not locked), if the output values of the speed sensors for 2 wheels are stuck at 0 km/h (0 mph), the No. 2 skid control ECU (brake actuator assembly) judges that a speed sensor is malfunctioning and illuminates the MIL and stores this DTC.

### **C0513 (Case 5):**

When the vehicle is being driven at a certain speed or more, the rotational direction of 3 wheels is determined, and the rotational direction of 1 wheel is not determined for a certain amount of time, the No. 2 skid control ECU (brake actuator assembly) judges that the speed sensor is malfunctioning and illuminates the MIL and stores this DTC.

## MONITOR STRATEGY

Related DTCs	C0513 (Case 1): Wheel speed sensor (RR) range/performance (correlation A) C0513 (Case 2): Wheel speed sensor (RR) range/performance (2 wheels) C0513 (Case 3): Wheel speed sensor (RR) range/performance (correlation B) C0513 (Case 5): Wheel speed sensor (RR) range/performance (rotatory direction)
Required Sensors/Components(Main)	Speed sensor Speed sensor rotor
Required Sensors/Components(Related)	No. 2 skid control ECU (brake actuator assembly) Stop light switch assembly Speed sensor
Frequency of Operation	Continuous
Duration	1 second: C0513 (Case 3) 3 seconds: C0513 (Case 5) 30 seconds: C0513 (Case 1 and 2)
MIL Operation	Immediately
Sequence of Operation	None

## TYPICAL ENABLING CONDITIONS

### Case 1

Monitor runs whenever the following DTCs are not stored	C0501 (Case 2): Wheel speed sensor (FL) range/performance (2 wheels) C0501 (Case 4): Wheel speed sensor (FL) range/performance (pulse output high) C0502: Wheel speed sensor (FL) voltage circuit open C0503: Wheel speed sensor (FL) voltage circuit high C0504 (Case 1): Wheel speed sensor (FL) intermittent/erratic (moment open) C0504 (Case 2): Wheel speed sensor (FL) intermittent/erratic (a piece of metal noise) C0504 (Case 3): Wheel speed sensor (FL) intermittent/erratic (a piece of metal rotor noise) C0507 (Case 2): Wheel speed sensor (FR) range/performance (2 wheels) C0507 (Case 4): Wheel speed sensor (FR) range/performance (pulse output high) C0508: Wheel speed sensor (FR) voltage circuit open C0509: Wheel speed sensor (FR) voltage circuit high C050A (Case 1): Wheel speed sensor (FR) intermittent/erratic (moment open) C050A (Case 2): Wheel speed sensor (FR) intermittent/erratic (a piece of metal noise) C050A (Case 3): Wheel speed sensor (FR) intermittent/erratic (a piece of metal rotor noise)
---	--

C050D (Case 2): Wheel speed sensor (RL) range/performance (2 wheels)  
 C050D (Case 4): Wheel speed sensor (RL) range/performance (pulse output high)  
 C050E: Wheel speed sensor (RL) voltage circuit open  
 C050F: Wheel speed sensor (RL) voltage circuit high  
 C0510 (Case 1): Wheel speed sensor (RL) intermittent/erratic (moment open)  
 C0510 (Case 2): Wheel speed sensor (RL) intermittent/erratic (a piece of metal noise)  
 C0510 (Case 3): Wheel speed sensor (RL) intermittent/erratic (a piece of metal rotor noise)  
 C0513 (Case 2): Wheel speed sensor (RR) range/performance (2 wheels)  
 C0513 (Case 4): Wheel speed sensor (RR) range/performance (pulse output high)  
 C0514: Wheel speed sensor (RR) voltage circuit open  
 C0515: Wheel speed sensor (RR) voltage circuit high  
 C0516 (Case 1): Wheel speed sensor (RR) intermittent/erratic (moment open)  
 C0516 (Case 2): Wheel speed sensor (RR) intermittent/erratic (a piece of metal noise)  
 C0516 (Case 3): Wheel speed sensor (RR) intermittent/erratic (a piece of metal rotor noise)  
 C137D: Brake system voltage circuit high  
 C14E1 (Case 1): Wheel speed sensor (FL) voltage circuit low  
 C14E1 (Case 2): Wheel speed sensor (FL) voltage circuit low (continuation)  
 C14E4 (Case 1): Wheel speed sensor (FR) voltage circuit low  
 C14E4 (Case 2): Wheel speed sensor (FR) voltage circuit low (continuation)  
 C14E7 (Case 1): Wheel speed sensor (RL) voltage circuit low  
 C14E7 (Case 2): Wheel speed sensor (RL) voltage circuit low (continuation)  
 C14EA (Case 1): Wheel speed sensor (RR) voltage circuit low  
 C14EA (Case 2): Wheel speed sensor (RR) voltage circuit low (continuation)

All of the following conditions are met

A, B, C, D, E, F, G and H

A. Chassis dynamometer mode

Off

B. Following condition is met

More than 0.012 seconds

IGR voltage

3.5 V or higher

C. Command to all ABS hold solenoids

Off

D. Command to all ABS release solenoids

Off

E. Following condition is met

More than 0.22 seconds

+BS voltage	17.4 V or less
F. Difference between the highest speed sensor output value and the second lowest speed sensor output value	Less than 20% of the highest speed sensor output value
G. The second lowest speed sensor output value	60 Hz + 2 km/h (1.24 mph) or more
H. IGP voltage	Higher than 10 V

## Case 2

Monitor runs whenever the following DTCs are not stored	<p>C0501 (Case 4): Wheel speed sensor (FL) range/performance (pulse output high)</p> <p>C0502: Wheel speed sensor (FL) voltage circuit open</p> <p>C0503: Wheel speed sensor (FL) voltage circuit high</p> <p>C0504 (Case 1): Wheel speed sensor (FL) intermittent/erratic (moment open)</p> <p>C0504 (Case 2): Wheel speed sensor (FL) intermittent/erratic (a piece of metal noise)</p> <p>C0504 (Case 3): Wheel speed sensor (FL) intermittent/erratic (a piece of metal rotor noise)</p> <p>C0507 (Case 4): Wheel speed sensor (FR) range/performance (pulse output high)</p> <p>C0508: Wheel speed sensor (FR) voltage circuit open</p> <p>C0509: Wheel speed sensor (FR) voltage circuit high</p> <p>C050A (Case 1): Wheel speed sensor (FR) intermittent/erratic (moment open)</p> <p>C050A (Case 2): Wheel speed sensor (FR) intermittent/erratic (a piece of metal noise)</p> <p>C050A (Case 3): Wheel speed sensor (FR) intermittent/erratic (a piece of metal rotor noise)</p> <p>C050D (Case 4): Wheel speed sensor (RL) range/performance (pulse output high)</p> <p>C050E: Wheel speed sensor (RL) voltage circuit open</p> <p>C050F: Wheel speed sensor (RL) voltage circuit high</p> <p>C0510 (Case 1): Wheel speed sensor (RL) intermittent/erratic (moment open)</p> <p>C0510 (Case 2): Wheel speed sensor (RL) intermittent/erratic (a piece of metal noise)</p> <p>C0510 (Case 3): Wheel speed sensor (RL) intermittent/erratic (a piece of metal rotor noise)</p> <p>C0513 (Case 4): Wheel speed sensor (RR) range/performance (pulse output high)</p> <p>C0514: Wheel speed sensor (RR) voltage circuit open</p> <p>C0515: Wheel speed sensor (RR) voltage circuit high</p> <p>C0516 (Case 1): Wheel speed sensor (RR) intermittent/erratic (moment open)</p> <p>C0516 (Case 2): Wheel speed sensor (RR) intermittent/erratic (a piece of metal noise)</p> <p>C0516 (Case 3): Wheel speed sensor (RR) intermittent/erratic (a piece of metal rotor noise)</p> <p>C137D: Brake system voltage circuit high</p>
---	---

	<p>C14E1 (Case 1): Wheel speed sensor (FL) voltage circuit low</p> <p>C14E1 (Case 2): Wheel speed sensor (FL) voltage circuit low (continuation)</p> <p>C14E4 (Case 1): Wheel speed sensor (FR) voltage circuit low</p> <p>C14E4 (Case 2): Wheel speed sensor (FR) voltage circuit low (continuation)</p> <p>C14E7 (Case 1): Wheel speed sensor (RL) voltage circuit low</p> <p>C14E7 (Case 2): Wheel speed sensor (RL) voltage circuit low (continuation)</p> <p>C14EA (Case 1): Wheel speed sensor (RR) voltage circuit low</p> <p>C14EA (Case 2): Wheel speed sensor (RR) voltage circuit low (continuation)</p>
All of the following conditions are met	A, B, C, D, E, F, G, H and I
A. Chassis dynamometer mode	Off
B. Following condition is met	More than 0.012 seconds
IGR voltage	3.5 V or higher
C. Command to all ABS hold solenoids	Off
D. Command to all ABS release solenoids	Off
E. Following condition is met	More than 0.22 seconds
+BS voltage	17.4 V or less
F. Brake pedal operation	Off
G. Parking brake	Off
H. Difference between the highest speed sensor output value and the second highest speed sensor output value	Less than 20% of the highest speed sensor output value
I. The second highest speed sensor output value	60 Hz + 2 km/h (1.24 mph) or more

### Case 3

Monitor runs whenever the following DTCs are not stored	<p>C0501 (Case 1): Wheel speed sensor (FL) range/performance (correlation A)</p> <p>C0501 (Case 2): Wheel speed sensor (FL) range/performance (2 wheels)</p> <p>C0501 (Case 3): Wheel speed sensor (FL) range/performance (correlation B)</p> <p>C0501 (Case 4): Wheel speed sensor (FL) range/performance (pulse output high)</p> <p>C0502: Wheel speed sensor (FL) voltage circuit open</p> <p>C0503: Wheel speed sensor (FL) voltage circuit high</p> <p>C0504 (Case 1): Wheel speed sensor (FL) intermittent/erratic (moment open)</p> <p>C0504 (Case 2): Wheel speed sensor (FL) intermittent/erratic (a piece of metal noise)</p>
---	---



C0504 (Case 3): Wheel speed sensor (FL)  
intermittent/erratic (a piece of metal rotor noise)

C0507 (Case 1): Wheel speed sensor (FR)  
range/performance (correlation A)

C0507 (Case 2): Wheel speed sensor (FR)  
range/performance (2 wheels)

C0507 (Case 3): Wheel speed sensor (FR)  
range/performance (correlation B)

C0507 (Case 4): Wheel speed sensor (FR)  
range/performance (pulse output high)

C0508: Wheel speed sensor (FR) voltage circuit open

C0509: Wheel speed sensor (FR) voltage circuit high

C0510 (Case 1): Wheel speed sensor (RL)  
intermittent/erratic (moment open)

C0510 (Case 2): Wheel speed sensor (RL)  
intermittent/erratic (a piece of metal noise)

C0510 (Case 3): Wheel speed sensor (RL)  
intermittent/erratic (a piece of metal rotor noise)

C0513 (Case 1): Wheel speed sensor (RR)  
range/performance (correlation A)

C0513 (Case 2): Wheel speed sensor (RR)  
range/performance (2 wheels)

C0513 (Case 4): Wheel speed sensor (RR)  
range/performance (pulse output high)

C0514: Wheel speed sensor (RR) voltage circuit open

C0515: Wheel speed sensor (RR) voltage circuit high

C0516 (Case 1): Wheel speed sensor (RR)  
intermittent/erratic (moment open)

C0516 (Case 2): Wheel speed sensor (RR)  
intermittent/erratic (a piece of metal noise)

C0516 (Case 3): Wheel speed sensor (RR)  
intermittent/erratic (a piece of metal rotor noise)

C050A (Case 1): Wheel speed sensor (FR)  
intermittent/erratic (moment open)

C050A (Case 2): Wheel speed sensor (FR)  
intermittent/erratic (a piece of metal noise)

C050A (Case 3): Wheel speed sensor (FR)  
intermittent/erratic (a piece of metal rotor noise)

C050D (Case 1): Wheel speed sensor (RL)  
range/performance (correlation A)

C050D (Case 2): Wheel speed sensor (RL)  
range/performance (2 wheels)

C050D (Case 3): Wheel speed sensor (RL)  
range/performance (correlation B)

C050D (Case 4): Wheel speed sensor (RL)  
range/performance (pulse output high)

C050E: Wheel speed sensor (RL) voltage circuit open

C050F: Wheel speed sensor (RL) voltage circuit high

C051C (Case 1): Acceleration sensor  
range/Performance (acceleration sensor lock)

C051C (Case 2): Acceleration sensor  
range/Performance (GL1, GL2 lock)

C051C (Case 3): Acceleration sensor range/Performance (acceleration sensor output)  
C051D: Acceleration sensor missing calibration  
C051E: Acceleration sensor intermittent/erratic  
C0520 (Case 1): Acceleration sensor (GL1, GL2) out of range  
C0520 (Case 2): Acceleration sensor GL2 out of range  
C0520 (Case 3): Acceleration sensor internal check  
C052B (Case 1 to 7): ABS pump motor performance (gate voltage)  
C052B (Case 8): ABS pump motor performance (motor relay current)  
C052B (Case 9): ABS pump motor performance (freewheeling MOS current)  
C052D: ABS pump motor circuit high  
C052E (Case 1 to 4): ABS pump motor circuit open (motor circuit)  
C052E (Case 5 and 6): ABS pump motor circuit open (motor relay)  
C053D: Master cylinder pressure sensor exceeded learning limit  
C0540 (Case 1): Pressure sensor lost communication  
C0540 (Case 2): Pressure sensor internal check  
C0540 (Case 3): Pressure sensor invalid data  
C0555: Wheel speed sensor (FL) range/performance  
C0556: Wheel speed sensor (FR) range/performance  
C0557: Wheel speed sensor (RL) range/performance  
C0558: Wheel speed sensor (RR) range/performance  
C056B: Pressure sensor intermittent/erratic  
C0597: ABS hold solenoid performance  
C05C1: Brake pedal position sensor learning not complete  
C1103 (Case 1): Brake pedal position sensor voltage circuit open  
C122E: Pressure sensor voltage circuit low  
C122F: Pressure sensor voltage circuit high  
C1240: Yaw rate and acceleration sensor incorrect  
C124A: Identification signal  
C12A7 (Case 1 and 2): ABS hold solenoid (FL) circuit open  
C12A7 (Case 3): ABS hold solenoid (FL) circuit low  
C12A8 (Case 1): ABS hold solenoid (FL) circuit high (solenoid Off current)  
C12A8 (Case 2 and 3): ABS hold solenoid (FL) circuit high (IC data)  
C12A8 (Case 4): ABS hold solenoid (FL) circuit high (solenoid On current)  
C12B2: ABS release solenoid (FL) circuit low  
C12B3: ABS release solenoid (FL) circuit high  
C12BD (Case 1 and 2): ABS hold solenoid (FR) circuit open

C12BD (Case 3): ABS hold solenoid (FR) circuit low  
C12BE (Case 1): ABS hold solenoid (FR) circuit high (solenoid Off current)  
C12BE (Case 2 and 3): ABS hold solenoid (FR) circuit high (IC data)  
C12BE (Case 4): ABS hold solenoid (FR) circuit high (solenoid On current)  
C12C8: ABS release solenoid (FR) circuit low  
C12C9: ABS release solenoid (FR) circuit high  
C12D3 (Case 1 and 2): ABS hold solenoid (RL) circuit open  
C12D3 (Case 3): ABS hold solenoid (RL) circuit low  
C12D4 (Case 1): ABS hold solenoid (RL) circuit high (solenoid Off current)  
C12D4 (Case 2 and 3): ABS hold solenoid (RL) circuit high (IC data)  
C12D4 (Case 4): ABS hold solenoid (RL) circuit high (solenoid On current)  
C12DE: ABS release solenoid (RL) circuit low  
C12DF: ABS release solenoid (RL) circuit high  
C12E9 (Case 1 and 2): ABS hold solenoid (RR) circuit open  
C12E9 (Case 3): ABS hold solenoid (RR) circuit low  
C12EA (Case 1): ABS hold solenoid (RR) circuit high (solenoid Off current)  
C12EA (Case 2 and 3): ABS hold solenoid (RR) circuit high (IC data)  
C12EA (Case 4): ABS hold solenoid (RR) circuit high (solenoid On current)  
C12F4: ABS release solenoid (RR) circuit low  
C12F5: ABS release solenoid (RR) circuit high  
C12F6: ABS hold solenoid other functional  
C12F7: ABS hold solenoid other functional  
C13BF: SM solenoid other functional  
C13C2 (Case 1 and 2): SM1 solenoid circuit open  
C13C2 (Case 3): SM1 solenoid circuit low  
C13C3 (Case 1): SM1 solenoid circuit high (solenoid Off current)  
C13C3 (Case 2 and 3): SM1 solenoid circuit high (IC data)  
C13C3 (Case 4): SM1 solenoid circuit high (solenoid On current)  
C13CB (Case 1 and 2): SM2 solenoid circuit open  
C13CB (Case 3): SM2 solenoid circuit low  
C13CC (Case 1): SM2 solenoid circuit high (solenoid Off current)  
C13CC (Case 2 and 3): SM2 solenoid circuit high (IC data)  
C13CC (Case 4): SM2 solenoid circuit high (solenoid On current)  
C137D: Brake system voltage circuit high

C1427: ABS pump motor stuck  
 C143B: Brake system voltage power supply relay circuit high  
 C143C: Brake system voltage power supply relay circuit open  
 C14E1 (Case 1): Wheel speed sensor (FL) voltage circuit low  
 C14E1 (Case 2): Wheel speed sensor (FL) voltage circuit low (continuation)  
 C14E4 (Case 1): Wheel speed sensor (FR) voltage circuit low  
 C14E4 (Case 2): Wheel speed sensor (FR) voltage circuit low (continuation)  
 C14E7 (Case 1): Wheel speed sensor (RL) voltage circuit low  
 C14E7 (Case 2): Wheel speed sensor (RL) voltage circuit low (continuation)  
 C14EA (Case 1): Wheel speed sensor (RR) voltage circuit low  
 C14EA (Case 2): Wheel speed sensor (RR) voltage circuit low (continuation)  
 P05DB: Brake pedal position sensor invalid data  
 P05DD: Brake pedal position sensor circuit open  
 P05DE: Brake pedal position sensor circuit high  
 P05DF: Brake pedal position sensor intermittent/erratic  
 P05E0: Brake pedal position sensor "A"/"B" correlation  
 U0125: Lost communication with multi-axis acceleration sensor module

All of the following conditions are met	A, B, C, D, E, F, G, H and I
A. Chassis dynamometer mode	Off
B. Following condition is met	More than 0.012 seconds
IGR voltage	3.5 V or higher
C. Command to all ABS hold solenoids	Off
D. Command to all ABS release solenoids	Off
E. Following condition is met	More than 0.22 seconds
+BS voltage	17.4 V or less
F. Brake pedal operation	Off
G. Parking brake	Off
H. Difference between the highest speed sensor output value and the second lowest speed sensor output value	Less than 2 km/h (1.24 mph)
I. BM voltage	6 V or higher

### Case 5

Monitor runs whenever the following DTCs are not stored	C0501 (Case 4): Wheel speed sensor (FL) range/performance (pulse output high)
---	---

C0502: Wheel speed sensor (FL) voltage circuit open  
C0503: Wheel speed sensor (FL) voltage circuit high  
C0504 (Case 1): Wheel speed sensor (FL) intermittent/erratic (moment open)  
C0504 (Case 2): Wheel speed sensor (FL) intermittent/erratic (a piece of metal noise)  
C0504 (Case 3): Wheel speed sensor (FL) intermittent/erratic (a piece of metal rotor noise)  
C0507 (Case 4): Wheel speed sensor (FR) range/performance (pulse output high)  
C0508: Wheel speed sensor (FR) voltage circuit open  
C0509: Wheel speed sensor (FR) voltage circuit high  
C050A (Case 1): Wheel speed sensor (FR) intermittent/erratic (moment open)  
C050A (Case 2): Wheel speed sensor (FR) intermittent/erratic (a piece of metal noise)  
C050A (Case 3): Wheel speed sensor (FR) intermittent/erratic (a piece of metal rotor noise)  
C050D (Case 4): Wheel speed sensor (RL) range/performance (pulse output high)  
C050E: Wheel speed sensor (RL) voltage circuit open  
C050F: Wheel speed sensor (RL) voltage circuit high  
C0510 (Case 1): Wheel speed sensor (RL) intermittent/erratic (moment open)  
C0510 (Case 2): Wheel speed sensor (RL) intermittent/erratic (a piece of metal noise)  
C0510 (Case 3): Wheel speed sensor (RL) intermittent/erratic (a piece of metal rotor noise)  
C0513 (Case 4): Wheel speed sensor (RR) range/performance (pulse output high)  
C0514: Wheel speed sensor (RR) voltage circuit open  
C0515: Wheel speed sensor (RR) voltage circuit high  
C0516 (Case 1): Wheel speed sensor (RR) intermittent/erratic (moment open)  
C0516 (Case 2): Wheel speed sensor (RR) intermittent/erratic (a piece of metal noise)  
C0516 (Case 3): Wheel speed sensor (RR) intermittent/erratic (a piece of metal rotor noise)  
C137D: Brake system voltage circuit high  
C14E1 (Case 1): Wheel speed sensor (FL) voltage circuit low  
C14E1 (Case 2): Wheel speed sensor (FL) voltage circuit low (continuation)  
C14E4 (Case 1): Wheel speed sensor (FR) voltage circuit low  
C14E4 (Case 2): Wheel speed sensor (FR) voltage circuit low (continuation)  
C14E7 (Case 1): Wheel speed sensor (RL) voltage circuit low  
C14E7 (Case 2): Wheel speed sensor (RL) voltage circuit low (continuation)

	C14EA (Case 1): Wheel speed sensor (RR) voltage circuit low C14EA (Case 2): Wheel speed sensor (RR) voltage circuit low (continuation)
All of the following conditions are met	-
Chassis dynamometer mode	Off
Command to all ABS hold solenoids	Off
Command to all ABS release solenoids	Off
Difference between the highest speed sensor output value and the lowest speed sensor output value	Less than 10% of the highest speed sensor output value
Lowest speed sensor output value	Higher than 30 km/h (18.64 mph)

## TYPICAL MALFUNCTION THRESHOLDS

### Case 1

One-seventh of the second lowest speed sensor output value	Higher than the lowest speed sensor output value
--	--

### Case 2

Second lowest speed sensor output value	0 km/h (0 mph)
---	----------------

### Case 3

Both of the following conditions are met	-
Lowest speed sensor output value	0 km/h (0 mph)
The lowest speed sensor value changes from less than 60 Hz + 2 km/h (1.24 mph) to 60 Hz + 2 km/h (1.24 mph) or more	-

### Case 5

Both of the following conditions are met	-
Direction of 3 wheels	Determined
Direction of 1 wheel	Undetermined

## COMPONENT OPERATING RANGE

### Case 1 to 3

All of the following conditions are met	-
Chassis dynamometer mode	Off
Wheel speed sensor fail (C0502, C0503, C0508, C0509, C050E, C050F, C0514, C0515)	Not detected
Wheel speed sensor voltage circuit low fail (C14E1, C14E4, C14E7, C14EA)	Not detected
Noise recovery experience	On

A piece of metal rotor noise recovery experience	On
Low speed recovery experience	On

**Case 5**

All of the following conditions are met	-
Chassis dynamometer mode	Off
Command to all ABS hold solenoids	Off
Command to all ABS release solenoids	Off
Difference between the highest speed sensor output value and the lowest speed sensor output value	Less than 10% of the highest speed sensor output value
Lowest speed sensor output value	Higher than 30 km/h (18.64 mph)
Direction of 4 wheels	Determined

**CONFIRMATION DRIVING PATTERN****NOTICE:**

When performing the normal judgment procedure, make sure that the driver door is closed and is not opened at any time during the procedure.

**HINT:**

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.
- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.
  1. Connect the GTS to the DLC3.
  2. Turn the ignition switch to ON and turn the GTS on.
  3. Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
  4. Turn the ignition switch off.
  5. Turn the ignition switch to ON (READY) and turn the GTS on.
  6. Drive the vehicle straight at a speed of 20 km/h (12 mph) or more for 30 seconds or more. [\*]

**HINT:**

[\*]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

7. Enter the following menus: Chassis / Brake/EPB\* / Utility / All Readiness.

\*: Electric Parking Brake System

8. Check the DTC judgment result.

**HINT:**

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE, perform driving pattern again.

**WIRING DIAGRAM**

Refer to DTC C051212.

Click here [INFO](#)

# PROCEDURE

<b>1.</b>	<b>CHECK VEHICLE</b>
-----------	----------------------

RESULT	PROCEED TO
for 2WD	A
for AWD	B

**B** **GO TO STEP 6**

**A**

<b>2.</b>	<b>CHECK REAR SPEED SENSOR RH INSTALLATION</b>
-----------	--

(a) Check the rear speed sensor RH installation.


OK:

There is no clearance between the rear speed sensor RH and the rear axle hub and bearing assembly RH.

**HINT:**

The rear speed sensor rotor RH and rear speed sensor RH are incorporated into the rear axle hub and bearing assembly RH.

If the rear speed sensor rotor RH needs to be replaced, replace the rear axle hub and bearing assembly RH with rear speed sensor RH.

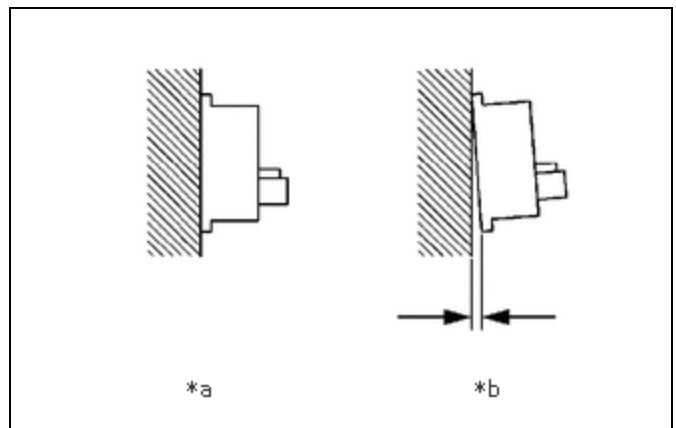

*a	Correct
*b	Incorrect

**NG** **REPLACE REAR AXLE HUB AND BEARING ASSEMBLY RH**

Click here

**OK**



### 3. READ VALUE USING GTS (RR WHEEL SPEED)

Pre-procedure1

(a) Perform a road test.

Procedure1

(b) Check the rear speed sensor RH (rear axle hub and bearing assembly RH) output value.

#### Chassis > Brake/EPB > Data List

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
RR Wheel Speed	Rear wheel speed sensor RH reading	Min.: 0.0 km/h (0 mph) Max.: 6553.5 km/h (4072 mph)	Vehicle stopped: 0.0 km/h (0 mph)	When driving at constant speed: No large fluctuations

#### Chassis > Brake/EPB > Data List

TESTER DISPLAY
RR Wheel Speed

OK:

The output value changes in accordance with the vehicle speed.

Post-procedure1

(c) None

**OK** ► **USE SIMULATION METHOD TO CHECK**

**NG**



### 4. INSPECT NO. 1 PARKING BRAKE WIRE ASSEMBLY

Pre-procedure1

(a) Turn the ignition switch off.

Procedure1

(b) Make sure that there is no looseness at the locking part and the connecting part of the connectors.

OK:

The connector is securely connected.

Pre-procedure2

(c) Disconnect the r2 and rR2 skid control sensor wire RH (No. 1 parking brake wire assembly) connector.

Procedure2

(d) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(e) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(r2,rR2\)](#)


[Click Connector\(r2\)](#)

[Click Connector\(rR2\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
r2-2 (+) - rR2-2 (RR+)	Always	Below 1 Ω	Ω
r2-2 (+) or rR2-2 (RR+) - Body ground and other terminals	Always	10 kΩ or higher	kΩ
r2-1 (-) - rR2-1 (RR-)	Always	Below 1 Ω	Ω
r2-1 (-) or rR2-1 (RR-) - Body ground and other terminals	Always	10 kΩ or higher	kΩ

Result:

PROCEED TO
OK
NG

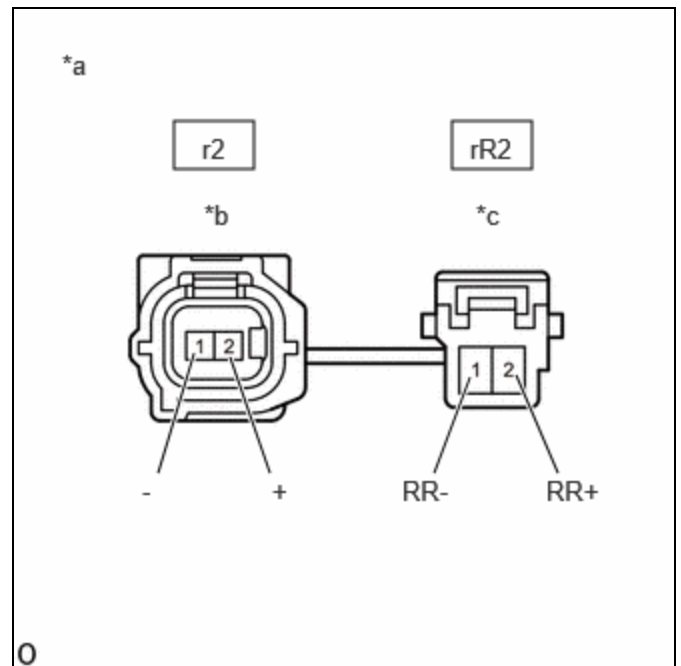

*a	Front view of skid control sensor wire RH (No. 1 parking brake wire assembly)
*b	to Sensor Side Connector
*c	to Vehicle Side Connector

Post-procedure1

(f) None

**NG** **REPLACE NO. 1 PARKING BRAKE WIRE ASSEMBLY**

**OK****5. CHECK HARNESS AND CONNECTOR (NO. 1 PARKING BRAKE WIRE ASSEMBLY - BRAKE ACTUATOR ASSEMBLY)**

## Procedure1

(a) Make sure that there is no looseness at the locking part and the connecting part of the connectors.

OK:

The connector is securely connected.

## Pre-procedure1

(b) Disconnect the A4 No. 2 skid control ECU (brake actuator assembly) connector.

## Procedure2

(c) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

## Procedure3

(d) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(rR2,A4\)](#)

[Click Connector\(rR2\)](#)

[Click Connector\(A4\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
rR2-2 (RR+) - A4-20 (RR+)	Always	Below 1 $\Omega$	$\Omega$
rR2-2 (RR+) or A4-20 (RR+) - Body ground	Always	10 k $\Omega$ or higher	k $\Omega$
rR2-1 (RR-) - A4-19 (RR-)	Always	Below 1 $\Omega$	$\Omega$
rR2-1 (RR-) or A4-19 (RR-) - Body ground	Always	10 k $\Omega$ or higher	k $\Omega$

**HINT:**

The rear speed sensor RH and rear speed sensor rotor RH are incorporated into the rear axle hub and bearing assembly RH.

If the rear speed sensor RH and rear speed sensor rotor RH need to be replaced, replace the rear axle hub and bearing assembly RH.

## Post-procedure1

(e) None

**OK** ▶ REPLACE REAR AXLE HUB AND BEARING ASSEMBLY RH

Click here [INFO](#)

**NG** ▶ REPAIR OR REPLACE HARNESS OR CONNECTOR


**6. CHECK REAR SPEED SENSOR RH INSTALLATION**

(a) Check the rear speed sensor RH installation.

OK:

There is no clearance between the rear speed sensor RH and the rear axle carrier RH.

The installation bolt is tightened properly.

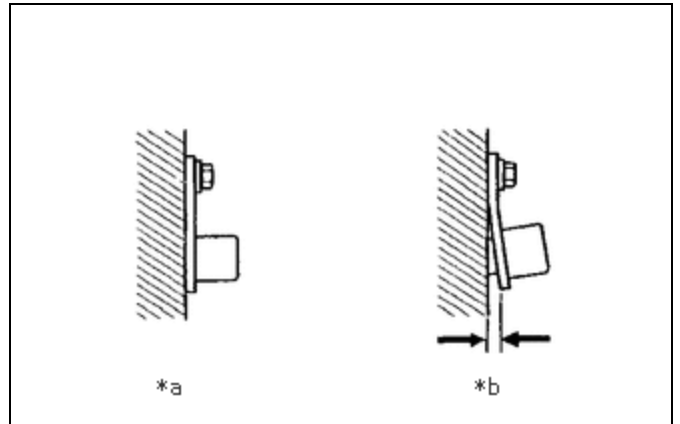

*a	Correct
*b	Incorrect

**NG** ▶ REINSTALL OR REPLACE REAR SPEED SENSOR RH

**OK**  
▼

**7. CHECK REAR SPEED SENSOR RH (CHECK FOR FOREIGN MATTER)**

Pre-procedure1

(a) Remove the rear speed sensor RH.

**HINT:**

Click here [INFO](#)

Procedure1

(b) Check the rear speed sensor tip RH.

OK:

The rear speed sensor tip RH is free of scratches, oil, and foreign matter.

**NOTICE:**

- If there is oil or foreign matter on the rear speed sensor RH, clean the rear speed sensor RH.

- If the rear speed sensor RH is damaged, replace the rear speed sensor RH with a new one.

Post-procedure1

(c) None

**NG**  **CLEAN OR REPLACE REAR SPEED SENSOR RH**

**OK**



<b>8.</b>	<b>READ VALUE USING GTS (RR WHEEL SPEED)</b>
-----------	--

Pre-procedure1

(a) Perform a road test.

Procedure1

(b) Check the rear speed sensor RH output value.

**Chassis > Brake/EPB > Data List**

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
RR Wheel Speed	Rear wheel speed sensor RH reading	Min.: 0.0 km/h (0 mph) Max.: 6553.5 km/h (4072 mph)	Vehicle stopped: 0.0 km/h (0 mph)	When driving at constant speed: No large fluctuations

**Chassis > Brake/EPB > Data List**

TESTER DISPLAY
RR Wheel Speed

OK:

The output value changes in accordance with the vehicle speed.

Post-procedure1

(c) None

**OK**  **USE SIMULATION METHOD TO CHECK**

**NG**



**9. INSPECT NO. 1 PARKING BRAKE WIRE ASSEMBLY**

Pre-procedure1

(a) Turn the ignition switch off.

Procedure1

(b) Make sure that there is no looseness at the locking part and the connecting part of the connectors.

OK:

The connector is securely connected.

Pre-procedure2

(c) Disconnect the r2 and rR2 skid control sensor wire RH (No. 1 parking brake wire assembly) connector.

Procedure2

(d) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(e) Measure the resistance according to the value(s) in the table below.

Standard Resistance:




[Click Location & Routing\(r2,rR2\)](#)

[Click Connector\(r2\)](#)

[Click Connector\(rR2\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
r2-1 (+) - rR2-2 (RR+)	Always	Below 1 Ω	Ω
r2-1 (+) or rR2-2 (RR+) - Body ground and other terminals	Always	10 kΩ or higher	kΩ
r2-2 (-) - rR2-1 (RR-)	Always	Below 1 Ω	Ω
r2-2 (-) or rR2-1 (RR-) - Body ground and other terminals	Always	10 kΩ or higher	kΩ

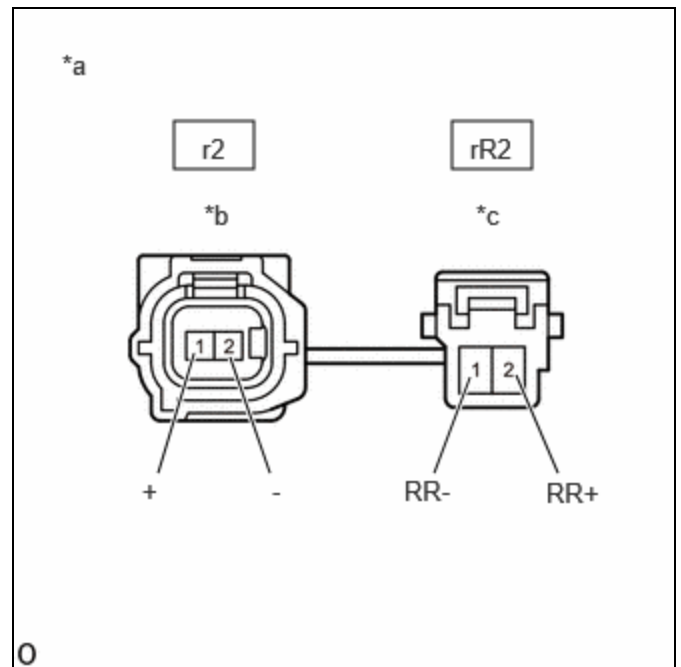

*a	Front view of skid control sensor wire RH (No. 1 parking brake wire assembly)
*b	to Sensor Side Connector
*c	to Vehicle Side Connector

Result:

PROCEED TO
OK
NG

Post-procedure1

(f) None

**NG** ▶ REPLACE NO. 1 PARKING BRAKE WIRE ASSEMBLY

**OK**  
▼

<b>10.</b>	<b>CHECK HARNESS AND CONNECTOR (NO. 1 PARKING BRAKE WIRE ASSEMBLY - BRAKE ACTUATOR ASSEMBLY)</b>
------------	--

Procedure1

(a) Make sure that there is no looseness at the locking part and the connecting part of the connectors.

OK:

The connector is securely connected.

Pre-procedure1

(b) Disconnect the A4 No. 2 skid control ECU (brake actuator assembly) connector.

Procedure2

(c) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(d) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(rR2,A4\)](#)

[Click Connector\(rR2\)](#)

[Click Connector\(A4\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
rR2-2 (RR+) - A4-20 (RR+)	Always	Below 1 Ω	Ω

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
rR2-2 (RR+) or A4-20 (RR+) - Body ground	Always	10 k $\Omega$ or higher	k $\Omega$
rR2-1 (RR-) - A4-19 (RR-)	Always	Below 1 $\Omega$	$\Omega$
rR2-1 (RR-) or A4-19 (RR-) - Body ground	Always	10 k $\Omega$ or higher	k $\Omega$

Post-procedure1

(e) None

**NG**  **REPAIR OR REPLACE HARNESS OR CONNECTOR**

**OK**



<b>11.</b>	<b>CHECK REAR SPEED SENSOR ROTOR RH (CHECK FOR FOREIGN MATTER)</b>
------------	--

Pre-procedure1

(a) Remove the component with the rear speed sensor rotor RH.

**HINT:**

[Click here](#) 

Procedure1

(b) Check the rear speed sensor rotor RH.

OK:

The rear speed sensor rotor RH is free of scratches, oil, and foreign matter.

**NOTICE:**

- If there is oil or foreign matter on the rear speed sensor rotor RH, clean the rear speed sensor rotor RH.
- Do not use parts cleaner when cleaning the rear speed sensor rotor RH.
- If the rear speed sensor rotor RH is damaged, replace the rear speed sensor rotor RH with a new one.

**HINT:**

The rear speed sensor rotor RH is incorporated into the rear axle hub and bearing assembly RH.

If the rear speed sensor rotor RH needs to be replaced, replace it together with the rear axle hub and bearing assembly RH.

RESULT	PROCEED TO
OK	A
NG (The rear speed sensor rotor RH is damaged.)	B
NG (There is foreign matter on the rear speed sensor rotor RH.)	C



Post-procedure1

(c) None

**A** ▶ REPLACE REAR SPEED SENSOR RH

**B** ▶ REPLACE REAR AXLE HUB AND BEARING ASSEMBLY RH

Click here [INFO](#)

**C** ▶ CLEAN REAR SPEED SENSOR ROTOR RH

