

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000002925E
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: DOOR / HATCH: POWER BACK DOOR CONTROL SWITCH: INSPECTION; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

INSPECTION

PROCEDURE

1. INSPECT POWER BACK DOOR CONTROL SWITCH

(a) Check the switch.

(1) Measure the resistance according to the value(s) in the table below.

Standard Resistance:




[Click Location & Routing\(K65\)](#)

[Click Connector\(K65\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
K65-5 (CSW) - K65-2 (E)	Pushed (ON)	Below 1 Ω	Ω
K65-5 (CSW) - K65-2 (E)	Not Pushed (OFF)	10 kΩ or higher	kΩ

If the result is not as specified, replace the power back door control switch.

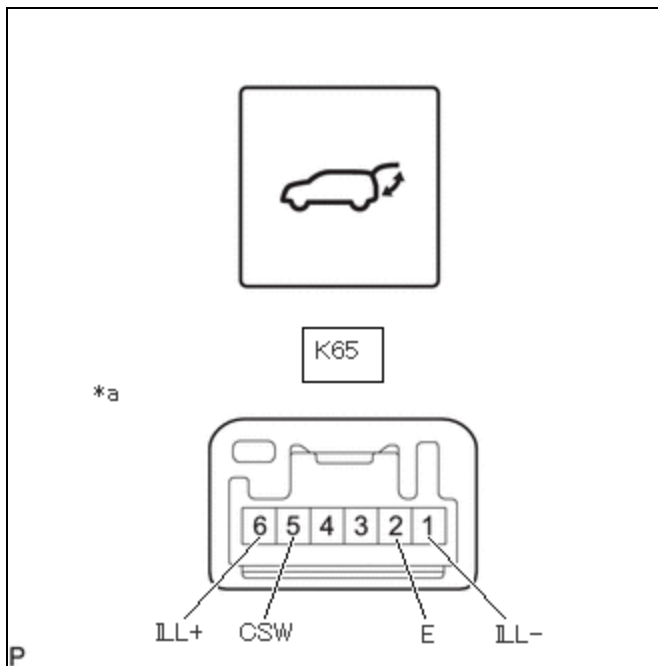

*a	Component without harness connected (Power Back Door Control Switch)
----	--

(b) Check the switch illumination.

(1) Apply auxiliary battery voltage to the switch connector and check that the power back door control switch illuminates.

OK:



[Click Location & Routing\(K65\)](#)

[Click Connector\(K65\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
Auxiliary battery positive (+) → Terminal K65-6 (ILL+) Auxiliary battery negative (-) → Terminal K65-1 (ILL-)	Always	Switch illumination illuminates

If the result is not as specified, replace the power back door control switch.

