

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM100000029A4G
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: HYBRID / BATTERY CONTROL: HYBRID BATTERY SYSTEM (for M20A-FXS): P1C9F1C; Hybrid/EV Battery Current Sensor for Driving Control Voltage Out of Range; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		


DTC	P1C9F1C	Hybrid/EV Battery Current Sensor for Driving Control Voltage Out of Range
------------	----------------	--

DESCRIPTION

Refer to the description for DTC P0ABF11.

Click here [INFO](#)

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
P1C9F1C	Hybrid/EV Battery Current Sensor for Driving Control Voltage Out of Range	The difference between IBA and IB0 exceeds the threshold. (1 trip detection logic)	Battery ECU assembly	Comes on	Master Warning: Comes on	HV Battery	A	SAE Code: P1CA0

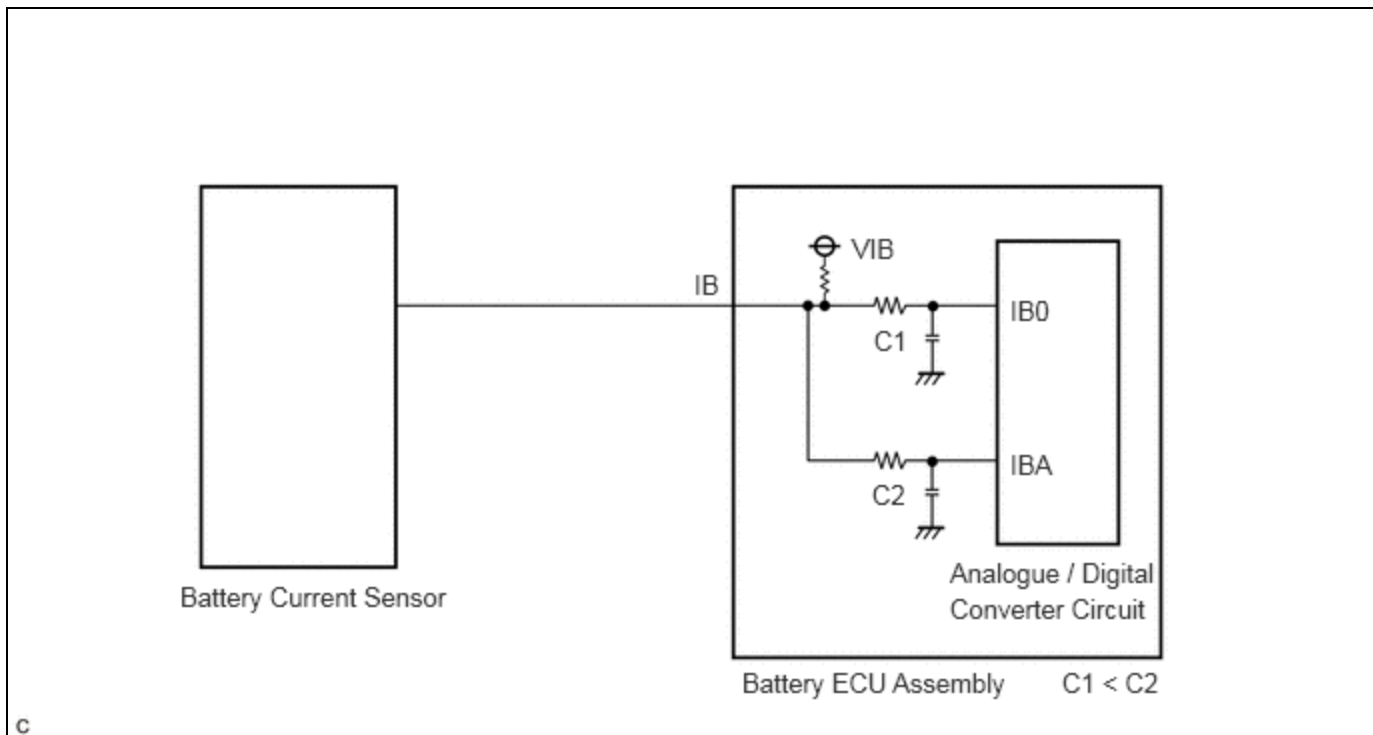

MONITOR DESCRIPTION

If the battery ECU assembly detects a malfunction due to the difference between the IB0 and IBA, the battery ECU assembly will illuminate the MIL and store a DTC.

MONITOR STRATEGY

Related DTCs	P1CA0 (INF P1C9F1C): Current sensor malfunction
Required sensors/components	Battery ECU assembly
Frequency of operation	Continuous
Duration	TMC's intellectual property
MIL operation	1 driving cycle
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not stored	TMC's intellectual property
Other conditions belong to TMC's intellectual property	-

TYPICAL MALFUNCTION THRESHOLDS

TMC's intellectual property	-
-----------------------------	---

COMPONENT OPERATING RANGE

Battery ECU assembly	DTC P1CA0 (INF P1C9F1C) is not detected
----------------------	---

CONFIRMATION DRIVING PATTERN

HINT:

- After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.

[Click here](#) INFO

- When clearing the permanent DTCs, refer to the "CLEAR PERMANENT DTC" procedure.

[Click here](#) INFO

- Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
- Turn the ignition switch off and wait for 2 minutes or more.
- Drive the vehicle on urban roads for approximately 10 minutes.[*1]

HINT:

[*1]: Normal judgment procedure.

The normal judgment procedure is used to complete DTC judgment and also used when clearing permanent DTCs.

- Enter the following menus: Powertrain / HV Battery / Utility / All Readiness.
- Check the DTC judgment result.

HINT:

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE, perform the normal judgment procedure again.

PROCEDURE

1.	CHECK DTC OUTPUT (HV BATTERY, HYBRID CONTROL)
-----------	--

Pre-procedure1

(a) None

Procedure1

(b) Check for DTCs.

Powertrain > HV Battery > Trouble Codes**Powertrain > Hybrid Control > Trouble Codes**

RESULT	PROCEED TO
"P1C9F1C" only is output, or DTCs except the ones in the table below are also output.	A
DTCs of hybrid battery system in the table below are output.	B
DTCs of hybrid control system in the table below are output.	C

SYSTEM	RELEVANT DTC	
Hybrid battery system	P060A47	Hybrid/EV Battery Energy Control Module Monitoring Processor Watchdog / Safety MCU Failure
	P060B49	Hybrid/EV Battery Energy Control Module A/D Processing Internal Electronic Failure
	P060687	Hybrid/EV Battery Energy Control Module Processor to Monitoring Processor Missing Message
	P1CBB12	Hybrid/EV Battery Current Sensor Power Supply Circuit Short to Auxiliary Battery
	P1CBB14	Hybrid/EV Battery Current Sensor Power Supply Circuit Short to Ground or Open
	P0ABF11	Hybrid/EV Battery Current Sensor "A" Circuit Short to Ground
	P0ABF15	Hybrid/EV Battery Current Sensor "A" Circuit Short to Auxiliary Battery or Open
	P0ABF28	Hybrid/EV Battery Current Sensor "A" Signal Bias Level Out of Range / Zero Adjustment Failure
	P0ABF2A	Hybrid/EV Battery Current Sensor "A" Signal Stuck In Range
Hybrid control system	P0A1F94	Hybrid/EV Battery Energy Control Module Unexpected Operation

Post-procedure1

(c) Turn the ignition switch off.

A  **REPLACE BATTERY ECU ASSEMBLY****B**  **GO TO DTC CHART (HYBRID BATTERY SYSTEM)**

C  [GO TO DTC CHART \(HYBRID CONTROL SYSTEM\)](#)

