

Last Modified: 12-04-2024	6.11:8.1.0	Doc ID: RM10000002BIYT
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [03/2023 -]
Title: HYBRID / BATTERY CONTROL: PLUG-IN CHARGE CONTROL SYSTEM (for PHEV Model): U113A87; Lost Communication with Solar Charging Control Module Missing Message; 2023 - 2024 MY Prius Prime [03/2023 -]		

DTC	U113A87	Lost Communication with Solar Charging Control Module Missing Message
------------	----------------	--

DESCRIPTION

The plug-in charge control ECU receives or transmits signals from the solar energy control ECU assembly via CAN communication.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	WARNING INDICATE	DTC OUTPUT FROM	PRIORITY	NOTE
U113A87	Lost Communication with Solar Charging Control Module Missing Message	The plugin charge control ECU cannot receive signals from the solar energy control ECU assembly (1 trip detection logic)	<ul style="list-style-type: none"> Solar Energy Control ECU Assembly Plug-in charge control ECU assembly Wire harness or connector 	Does not come on	Master Warning: Comes on	Plug-in Control	B	SAE Code: U113A

CONFIRMATION DRIVING PATTERN

HINT:

After repair has been completed, clear the DTC and then check that the vehicle has returned to normal by performing the following All Readiness check procedure.


Click here [INFO](#)

1. Clear the DTCs (even if no DTCs are stored, perform the clear DTC procedure).
2. Turn the ignition switch off and wait for 2 minutes or more.
3. With ignition switch ON and wait for 2 minutes or more.
4. Enter the following menus: Powertrain / Plug-in Control / Utility / All Readiness.
5. Check the DTC judgment result.

HINT:

- If the judgment result shows NORMAL, the system is normal.
- If the judgment result shows ABNORMAL, the system has a malfunction.
- If the judgment result shows INCOMPLETE or N/A, perform driving pattern again.

WIRING DIAGRAM

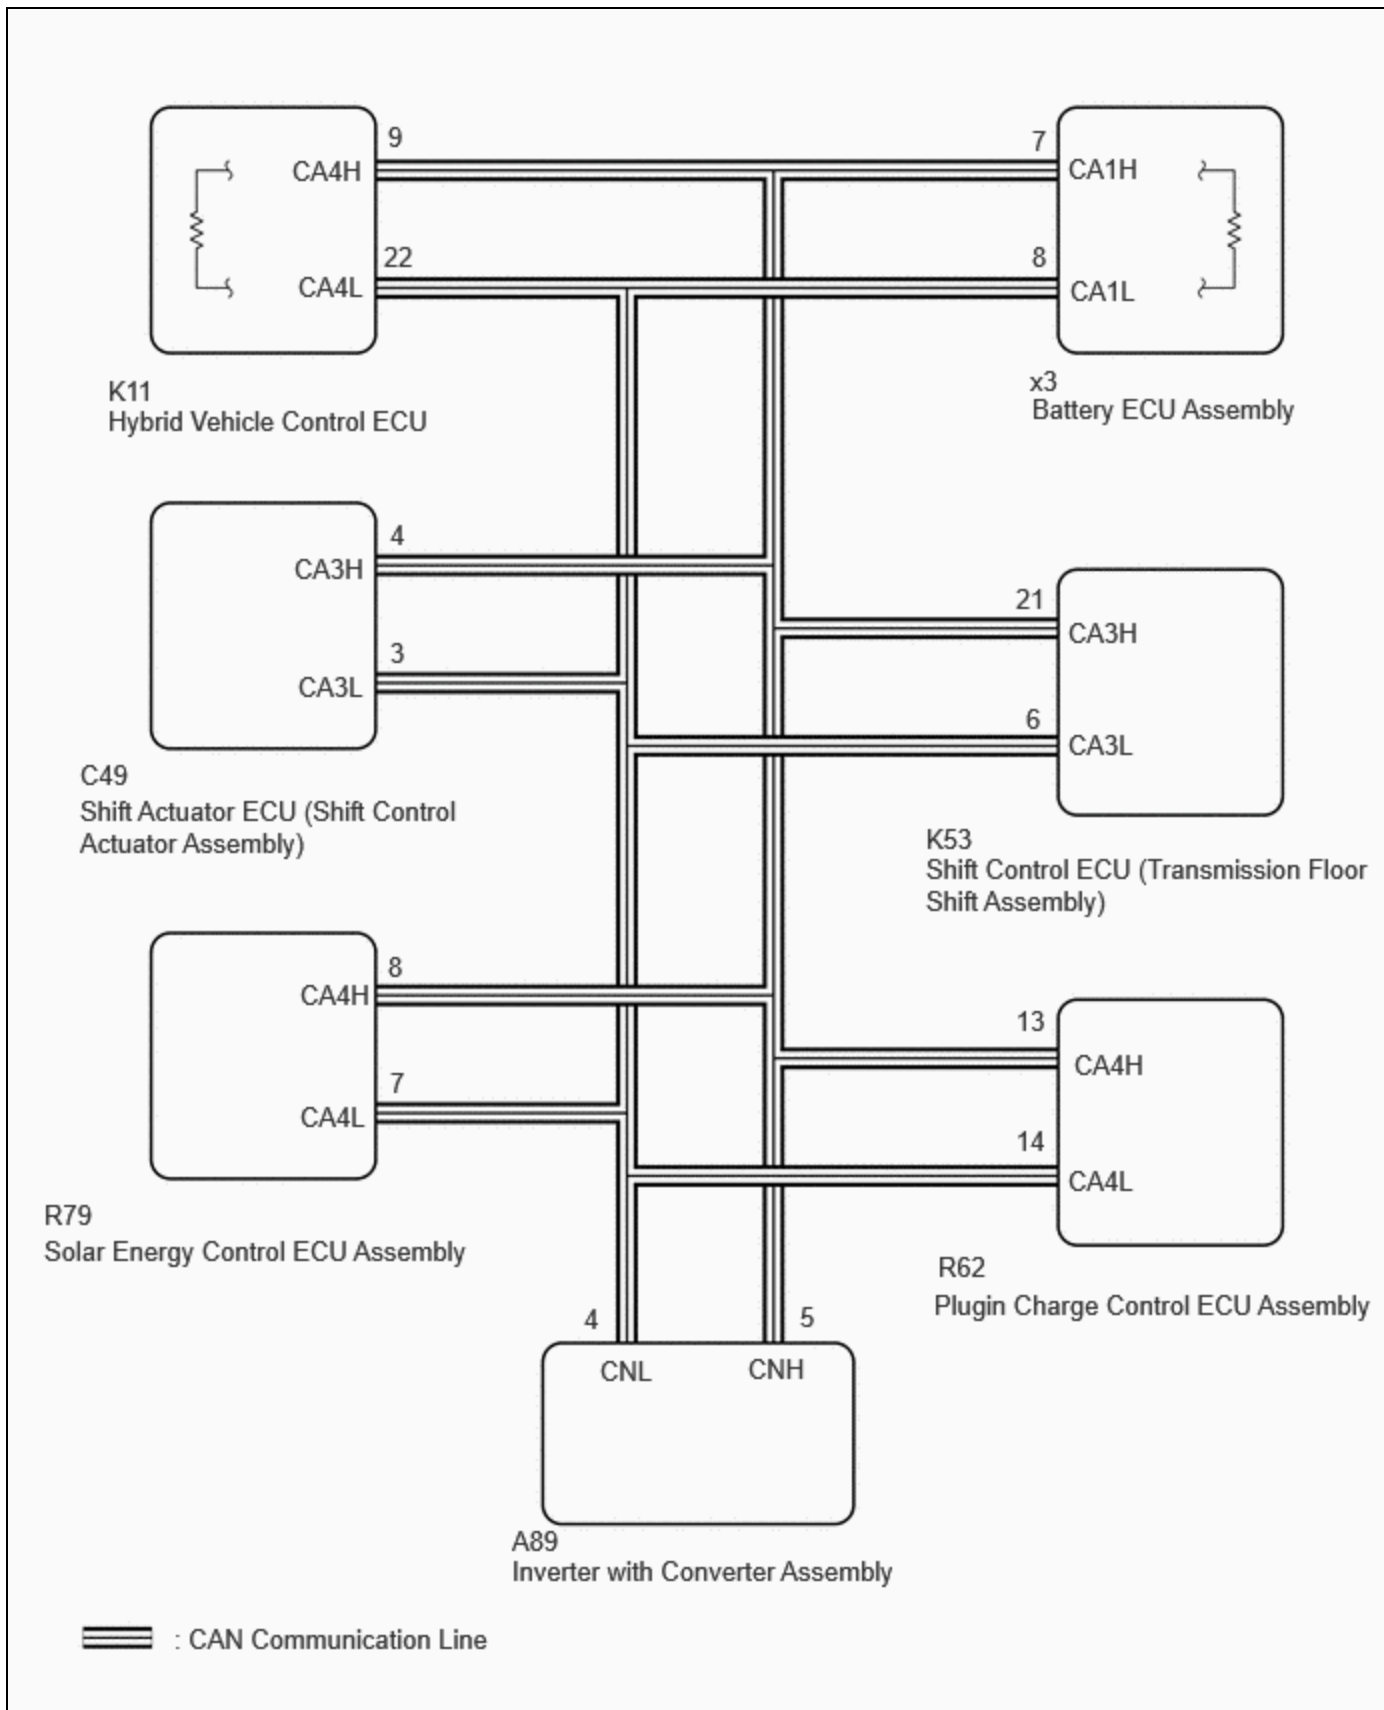

CAUTION / NOTICE / HINT

CAUTION:

Refer to the precautions before inspecting high voltage circuit.

[Click here](#) INFO

NOTICE:

- Be sure to check that the applicable DTC is output from the Plug-in Charge Control System.
- After the ignition switch is turned off, there may be a waiting time before disconnecting the negative (-) auxiliary battery terminal.

[Click here](#) INFO

- When disconnecting and reconnecting the auxiliary battery.

HINT:

When disconnecting and reconnecting the auxiliary battery, there is an automatic learning function that completes learning when the respective system is used.

[Click here](#) INFO

PROCEDURE

1.	CHECK DTC OUTPUT (HEALTH CHECK)
-----------	--

Pre-procedure1

(a) Enter the following menus: Health Check.

Procedure1

(b) Check for DTCs.

RESULT	PROCEED TO
U113A87 only is output	A
U113A87 and other DTCs are output	B

Post-procedure1

(c) Turn the ignition switch off.

B **GO TO DTC CHART**

A
▼

2.	CHECK FOR SHORT TO GND IN CAN BUS LINE (WITH ECU CONNECTED)
-----------	--

Pre-procedure1

(a) Disconnect the cable from the negative (-) auxiliary battery terminal.

Procedure1

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance:




[Click Location & Routing\(R62\)](#)

[Click Connector\(R62\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R62-13 (CA4H) or R62-14 (CA4L) - Body ground	Cable from negative (-) auxiliary battery terminal disconnected	200 Ω or higher	Ω

Result:

PROCEED TO
OK
NG

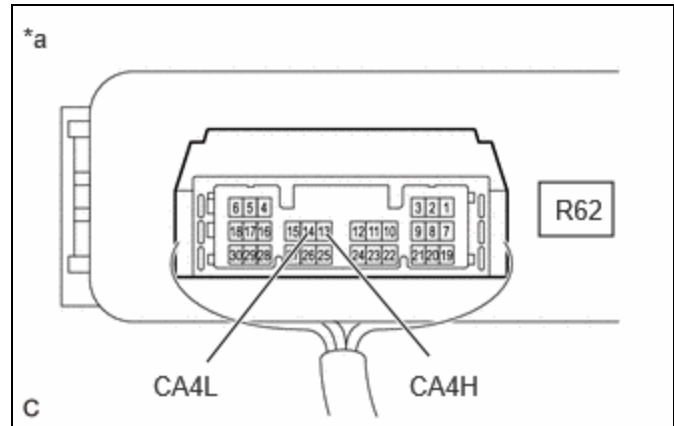

*a	Component with harness connected (Plugin Charge Control ECU Assembly)
----	---

Post-procedure1

(c) Connect the cable to the negative (-) auxiliary battery terminal.

NG ► **GO TO STEP 5**

OK



3.	CHECK FOR OPEN IN CAN MAIN BUS LINES (PLUGIN CHARGE CONTROL ECU ASSEMBLY - SOLAR ENERGY CONTROL ECU ASSEMBLY)
-----------	--

Pre-procedure1

(a) Disconnect the R62 plugin charge control ECU assembly connector.

Procedure1

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(R62\)](#)

[Click Connector\(R62\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R62-13 (CA4H) - R62-14 (CA4L)	Ignition switch off	54 to 69 Ω	Ω

Post-procedure1

(c) Connect the plugin charge control ECU assembly.

OK **REPLACE PLUGIN CHARGE CONTROL ECU ASSEMBLY**

NG



4.	CHECK HARNESS AND CONNECTOR (PLUGIN CHARGE CONTROL ECU ASSEMBLY - SOLAR ENERGY CONTROL ECU ASSEMBLY)
-----------	---

CAUTION:

Be sure to wear insulated gloves.

NOTICE:

- Before disconnecting the connector, check that it is not loose or disconnected.
- Check the terminals of the connector for deformation and corrosion.

Pre-procedure1

(a) Check that the service plug grip is not installed.

NOTICE:

After removing the service plug grip, do not turn the ignition switch to ON, unless instructed by the repair manual because this may cause a malfunction.

(b) Disconnect the R62 plugin charge control ECU assembly connector.

(c) Disconnect the R79 solar energy control ECU assembly connector.

(d) Disconnect the K11 hybrid vehicle control ECU connector.

(e) Disconnect the A89 inverter with converter assembly connector.

(f) Disconnect the K53 shift control ECU (transmission floor shift assembly) connector.

(g) Disconnect the C49 shift actuator ECU (shift control actuator assembly) connector.

(h) Disconnect the x3 battery ECU assembly connector.

(i) Connect the SST.

HINT:

Click here

Procedure1

(j) Measure the voltage according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(R62,R79\)](#)

[Click Connector\(R62\)](#)

[Click Connector\(R79\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R62-13 (CA4H) - R79-8 (CA4H)	Ignition switch off	Below 1 Ω	Ω
R62-14 (CA4L) - R79-7 (CA4L)	Ignition switch off	Below 1 Ω	Ω
R62-13 (CA4H) - R62-14 (CA4L)	Ignition switch off	1 M Ω or higher	M Ω
R79-8 (CA4H) - R79-7 (CA4L)	Ignition switch off	1 M Ω or higher	M Ω

NOTICE:

Make sure that each connector between the plugin charge control ECU assembly and solar energy control ECU assembly is not loose or disconnected and its terminals are not deformed or corroded.

Post-procedure1

(k) Disconnect the SST.

(l) Connect the battery ECU assembly connector.

(m) Connect the shift actuator ECU (shift control actuator assembly) connector.

(n) Connect the shift control ECU (transmission floor shift assembly) connector.

(o) Connect the inverter with converter assembly connector.

(p) Connect the Hybrid vehicle control ECU connector.

(q) Connect the solar energy control ECU assembly connector.

(r) Connect the plugin charge control ECU assembly connector.

OK ► REPLACE SOLAR ENERGY CONTROL ECU ASSEMBLY

NG ► REPAIR OR REPLACE HARNESS OR CONNECTOR IN CAN BUS LINE (PLUGIN CHARGE CONTROL ECU ASSEMBLY - SOLAR ENERGY CONTROL ECU ASSEMBLY)

5.	CHECK FOR SHORT TO GND IN CAN BUS LINE (WITH SOLAR ENERGY CONTROL ECU ASSEMBLY DISCONNECTED)
-----------	---

Pre-procedure1

(a) Disconnect the R79 solar energy control ECU assembly connector.

NOTICE:

- Before disconnecting the connector, check that it is not loose or disconnected.
- Check the terminals of the connector for deformation and corrosion.

Procedure1

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(R79\)](#)

[Click Connector\(R79\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R79-8 (CA4H) or R79-7 (CA4L) - Body ground	Ignition switch off	200 Ω or higher	Ω

Post-procedure1

(c) Connect the solar energy control ECU assembly connector.

OK **REPLACE SOLAR ENERGY CONTROL ECU ASSEMBLY**

NG



6.	CHECK FOR SHORT TO GND IN CAN BUS LINE (WITH PLUGIN CHARGE CONTROL ECU ASSEMBLY DISCONNECTED)
-----------	--

Pre-procedure1

(a) Disconnect the R62 plugin charge control ECU assembly connector.

Procedure1

(b) Measure the resistance according to the value(s) in the table below.

Standard Resistance:



[Click Location & Routing\(R62\)](#)

[Click Connector\(R62\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
R62-13 (CA4H) or R62-14 (CA4L) - Body ground	Ignition switch off	200 Ω or higher	Ω

Post-procedure1

(c) Connect the plugin charge control ECU assembly connector.

OK ► **REPLACE PLUGIN CHARGE CONTROL ECU ASSEMBLY**

NG ► **REPAIR OR REPLACE HARNESS OR CONNECTOR IN CAN BUS LINE (PLUGIN CHARGE CONTROL ECU ASSEMBLY - SOLAR ENERGY CONTROL ECU ASSEMBLY)**

