

<b>DTC</b>	<b>P0128</b>	<b>Coolant Thermostat (Coolant Temperature Below Thermostat Regulating Temperature)</b>
------------	--------------	---

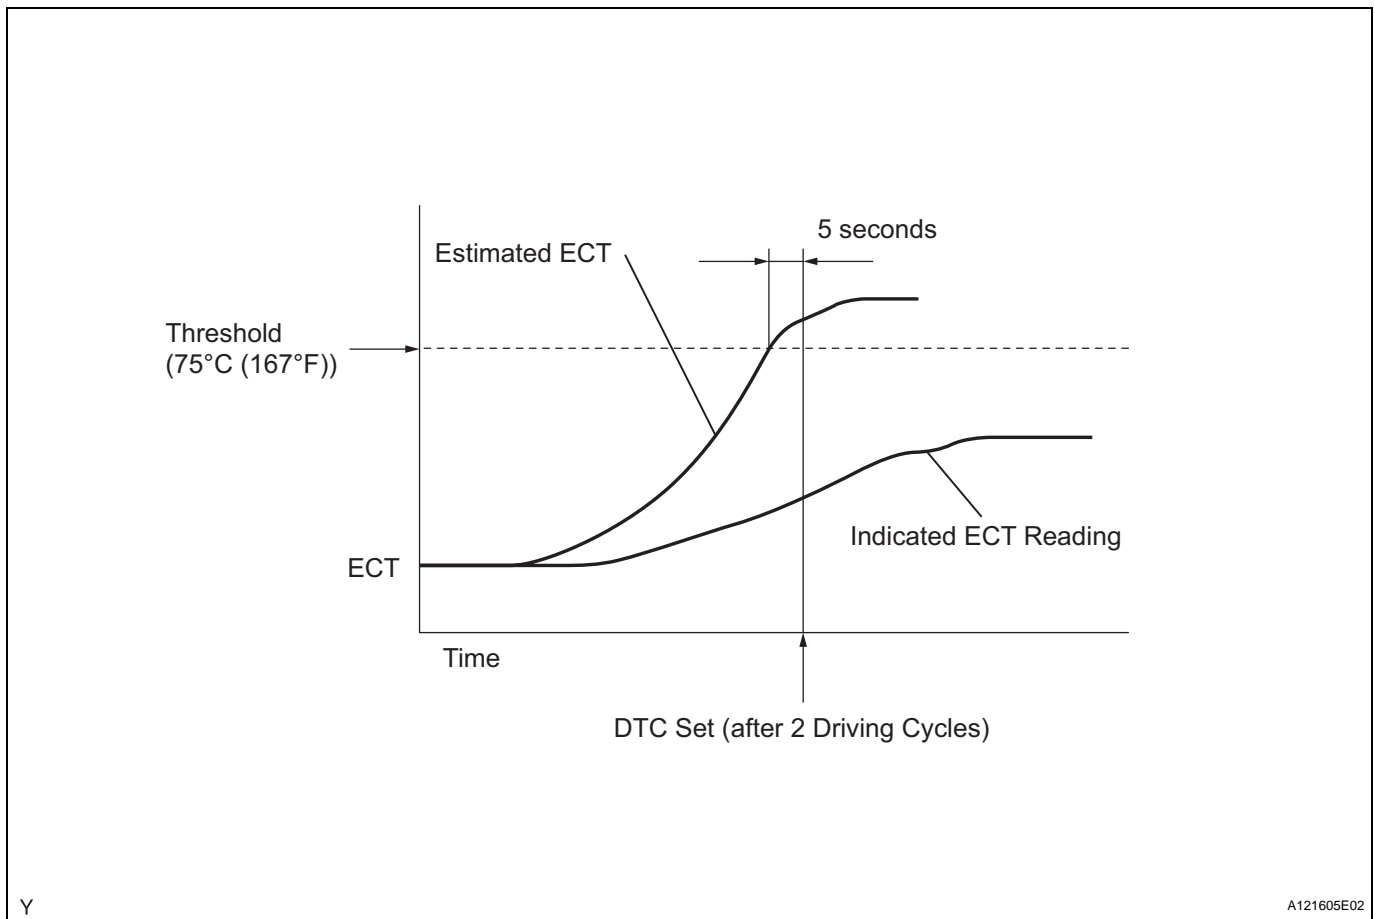
**HINT:**

This DTC relates to the thermostat.

**DESCRIPTION**

This DTC is set when the Engine Coolant Temperature (ECT) does not reach 75°C (167°F) despite sufficient engine warm-up time having elapsed.

DTC No.	DTC Detection Conditions	Trouble Areas
P0128	Conditions (a), (b) and (c) met for 5 seconds (2 trip detection logic): (a) Cold start (b) Engine warmed up (c) ECT less than 75°C (167°F)	<ul style="list-style-type: none"> <li>Thermostat</li> <li>Cooling system</li> <li>ECT sensor</li> <li>ECM</li> </ul>

**ES****MONITOR DESCRIPTION**

The ECM estimates the ECT based on the starting temperature, engine loads, and engine speeds. The ECM then compares the estimated temperature with the actual ECT. When the estimated ECT reaches 75°C (167°F), the ECM checks the actual ECT. If the actual ECT is less than 75°C (167°F), the ECM interprets this as a malfunction in the thermostat or the engine cooling system and sets the DTC.

**MONITOR STRATEGY**

Related DTCs	P0128: Coolant Thermostat
Required Sensors/Components (Main)	Thermostat

Required Sensors/Components (Related)	Engine Coolant Temperature (ECT) sensor, Intake Air Temperature (IAT) sensor, Vehicle speed sensor
Frequency of Operation	Once per driving cycle
Duration	900 seconds
MIL Operation	2 driving cycles
Sequence of Operation	None

## TYPICAL ENABLING CONDITIONS

Monitor runs whenever following DTCs not present	P0010 (VVT OCV ) P0011 (VVT System 1 - Advance) P0012 (VVT System 1 - Retard) P0031, P0032 (A/F sensor heater - Sensor 1) P0100 - P0103 (MAF meter) P0110 - P0113 (IAT sensor) P0115 - P0118 (ECT sensor) P0125 (Insufficient ECT for Closed Loop) P0171, P0172 (Fuel system) P0300 - P0304 (Misfire) P0335 (CKP sensor) P0340 (CMP sensor) P0351 - P0354 (Igniter) P0500 (VSS) P2196 (A/F sensor - rationality) P2A00 (A/F sensor - slow response)
Battery voltage	11 V or more
Either of following conditions 1 or 2 met:	-
1. All of following conditions met:	-
• ECT at engine start - IAT at engine start	-15°C to 7°C (-27°F to 12.6°F)
• ECT at engine start	-10°C to 56°C (14°F to 133°F)
• IAT at engine start	-10°C to 56°C (14°F to 133°F)
2. All of following conditions met:	-
• ECT at engine start - IAT at engine start	More than 7°C (12.6 °F)
• ECT at engine start	56°C (133°F) or less
• IAT at engine start	-10°C (14°F) or more
Accumulated time at 128 km/h (80 mph) or more of vehicle speed	Less than 20 seconds

## TYPICAL MALFUNCTION THRESHOLDS

Duration that both following conditions (a) and (b) met	5 seconds or more
(a) Estimated ECT	75°C (167°F) or more
(b) ECT sensor output	Below 75°C (167°F)

## INSPECTION PROCEDURE

### HINT:

Read freeze frame data using the intelligent tester. Freeze frame data records the engine condition when malfunctions are detected. When troubleshooting, freeze frame data can help determine if the vehicle was moving or stationary, if the engine was warmed up or not, if the air-fuel ratio was lean or rich, and other data from the time the malfunction occurred.

<b>1</b>	<b>CHECK ANY OTHER DTCS OUTPUT (IN ADDITION TO DTC P0128)</b>
----------	---

- Connect the intelligent tester to the DLC3.
- Turn the ignition switch ON.
- Turn the tester ON.

- (d) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- (e) Read DTCs.

**Result**

Display (DTC Output)	Proceed To
P0128	A
P0128 and other DTCs	B

**HINT:**

If any DTCs other than P0128 are output, troubleshoot those DTCs first.

**B****GO TO DTC CHART****A****ES****2****CHECK COOLING SYSTEM**

- (a) Check for defects in the cooling system that might cause the system to be too cold, such as abnormal radiator fan operation or any modifications.

**NG****REPAIR OR REPLACE COOLING SYSTEM****OK****3****INSPECT THERMOSTAT**

- (a) Remove the thermostat (see page [CO-15](#)).
- (b) Measure the valve opening temperature of the thermostat.

**Standard value:****80 to 84°C (176 to 183°F)****HINT:**

In addition to the above check, confirm that the valve is completely closed when the temperature is below the standard.

- (c) Reinstall the thermostat (see page [CO-15](#)).

**NG****REPLACE THERMOSTAT****OK****REPLACE ECM**