

<b>Last Modified:</b> 12-04-2024	6.11:8.1.0	<b>Doc ID:</b> RM1000000028X2F
<b>Model Year Start:</b> 2023	<b>Model:</b> Prius Prime	<b>Prod Date Range:</b> [12/2022 - ]
<b>Title:</b> BRAKE CONTROL / DYNAMIC CONTROL SYSTEMS: ELECTRONICALLY CONTROLLED BRAKE SYSTEM: P057113; Brake Switch "A" Circuit Open; 2023 - 2024 MY Prius Prius Prime [12/2022 - ]		

<b>DTC</b>	<b>P057113</b>	<b>Brake Switch "A" Circuit Open</b>
------------	----------------	--------------------------------------

## DESCRIPTION

The No. 2 skid control ECU (brake actuator assembly) detects the brake operating conditions through a signal transmitted by the stop light switch assembly.

The No. 2 skid control ECU (brake actuator assembly) incorporates a circuit to detect an open circuit.

This DTC is output when an open circuit is detected in the stop light signal input line.

DTC NO.	DETECTION ITEM	DTC DETECTION CONDITION	TROUBLE AREA	MIL	DTC OUTPUT FROM	PRIORITY	NOTE
P057113	Brake Switch "A" Circuit Open	When the voltage at terminal +BS is 9.5 V or more and the stop light drive output (STPO) is off, an open in the STP circuit is detected for 0.3 seconds or more.	<ul style="list-style-type: none"> <li>Wire harness and connector</li> <li>Stop light switch assembly</li> <li>STP circuit</li> <li>No. 2 skid control ECU (brake actuator assembly)</li> </ul>	Does not come on	Brake/EPB	A	Output ECU: No. 2 skid control ECU (brake actuator assembly)

## WIRING DIAGRAM

Refer to DTC C13807E.

Click here [INFO](#)

## CAUTION / NOTICE / HINT

### **NOTICE:**

Inspect the fuses for circuits related to this system before performing the following procedure.

## PROCEDURE

<b>1.</b>	<b>CHECK STOP LIGHT OPERATION</b>
-----------	-----------------------------------

(a) Check that the stop lights come on when the brake pedal is depressed.

RESULT	PROCEED TO
All stop lights illuminate when the brake pedal is depressed and turn off when the brake pedal is released.	A
All stop lights do not illuminate when the brake pedal is depressed.	B
One or more stop lights illuminate when the brake pedal is depressed but remain on when the brake pedal is released.	C

**B** ► GO TO STEP 10

**C** ► GO TO STEP 6

**A**  
▼

<b>2.</b>	<b>READ VALUE USING GTS (STOP LIGHT SW)</b>
-----------	---

(a) Check the value of Stop Light SW when the brake pedal is depressed.

**Chassis > Brake/EPB > Data List**

TESTER DISPLAY	MEASUREMENT ITEM	RANGE	NORMAL CONDITION	DIAGNOSTIC NOTE
Stop Light SW	Stop light switch assembly status (STP or STP2 terminal input)	OFF / ON	OFF: Brake pedal released ON: Brake pedal depressed	<p style="text-align: center;"><b>HINT:</b></p> <ul style="list-style-type: none"> <li>Stop light control relay (stop light switch assembly) off: STP terminal status displayed.</li> <li>Stop light control relay (stop light switch assembly) on: STP2 terminal status displayed.</li> </ul>

**Chassis > Brake/EPB > Data List**

TESTER DISPLAY
Stop Light SW

RESULT	PROCEED TO
The value of Stop Light SW is ON	A
None of the above conditions are met	B

**B**  **GO TO STEP 9**

**A**  


**3. STOP LIGHT SWITCH ASSEMBLY OUTPUT CIRCUIT INSPECTION**

Pre-procedure1

(a) Turn the ignition switch off.

Procedure1

(b) Make sure that there is no looseness at the locking part and the connecting part of the connector.

OK:

The connector is securely connected.

Pre-procedure2

(c) Turn the ignition switch to ON.

Procedure2


(d) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(A18\)](#)

[Click Connector\(A18\)](#)

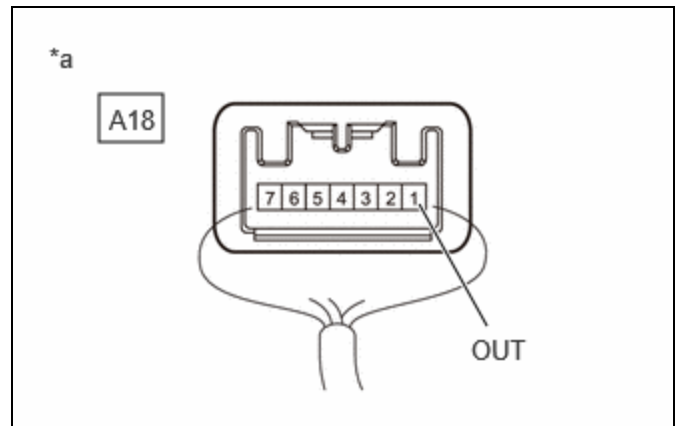

\*a Component with harness connected (Stop Light Switch Assembly)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A18-1 (OUT) - Body ground	<ul style="list-style-type: none"> <li>Ignition switch ON</li> <li>The headlights are on</li> <li>The blower motor switch is in the HI position</li> <li>The rear window defogger</li> </ul>	Below 1.5 V	V

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
	is turned on • Stop light switch assembly off (Brake pedal released)		

Result:

PROCEED TO
OK
NG

Post-procedure1

(e) None

**NG** ► GO TO STEP 6

**OK**



<b>4.</b>	<b>CLEAR DTC</b>
-----------	------------------

Pre-procedure1

(a) None

Procedure1

(b) Clear the DTCs.

**Chassis > Brake/EPB > Clear DTCs**

Post-procedure1

(c) Turn the ignition switch off.

**NEXT**



## 5. RECONFIRM DTC

Pre-procedure1

- (a) Based on the Freeze Frame Data and interview with the customer, attempt to reproduce the conditions when the malfunction occurred.

Procedure1

- (b) Check if the same DTC is output.

**Chassis > Brake/EPB > Trouble Codes**

RESULT	PROCEED TO
P057113 is not output	A
P057113 is output	B

Post-procedure1

- (c) None

**A**  **USE SIMULATION METHOD TO CHECK**

**B**  **REPLACE BRAKE ACTUATOR ASSEMBLY**

Click here 

## 6. CHECK STOP LIGHT SWITCH ASSEMBLY

Pre-procedure1

- (a) Turn the ignition switch off.

Procedure1

- (b) Make sure that there is no looseness at the locking part and the connecting part of the connector.

OK:

The connector is securely connected.

Pre-procedure2

- (c) Disconnect the A18 stop light switch assembly connector.

Procedure2

- (d) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(e) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(A18\)](#)

[Click Connector\(A18\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A18-1 (OUT) - Body ground	Stop light switch assembly off (Brake pedal released)	Below 1.5 V	V

Post-procedure1

(f) None

**OK** ► **REPLACE STOP LIGHT SWITCH ASSEMBLY**

**NG**



<b>7.</b>	<b>CHECK BRAKE ACTUATOR ASSEMBLY</b>
-----------	--------------------------------------

Procedure1

(a) Make sure that there is no looseness at the locking part and the connecting part of the connector.

OK:

The connector is securely connected.

Pre-procedure1

(b) Disconnect the A4 No. 2 skid control ECU (brake actuator assembly) connector.

Procedure2

(c) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(d) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(A18\)](#)

[Click Connector\(A18\)](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A18-1 (OUT) - Body ground	Stop light switch assembly off (Brake pedal released)	Below 1.5 V	V

Post-procedure1

(e) None

**OK** ► **REPLACE BRAKE ACTUATOR ASSEMBLY**

Click here [INFO](#)

**NG**



<b>8.</b>	<b>CHECK FOR SHORT TO +B IN STP CIRCUIT</b>
-----------	---

(a) Check that there is no short to +B in the STP circuit (wire harnesses, connectors, ECUs and stop lights).

OK:

No short to +B.

**OK** ► **USE SIMULATION METHOD TO CHECK**

**NG** ► **REPAIR OR REPLACE MALFUNCTIONING PART**

<b>9.</b>	<b>CHECK HARNESS AND CONNECTOR (STP TERMINAL)</b>
-----------	---

Pre-procedure1

(a) Turn the ignition switch off.

Procedure1

(b) Make sure that there is no looseness at the locking part and the connecting part of the connector.

OK:

The connector is securely connected.

Pre-procedure2

(c) Disconnect the A4 No. 2 skid control ECU (brake actuator assembly) connector.

Procedure2

(d) Check both the connector case and the terminals for deformation and corrosion.

OK:

No deformation or corrosion.

Procedure3

(e) Measure the voltage according to the value(s) in the table below.

Standard Voltage:



[Click Location & Routing\(A4\).](#)

[Click Connector\(A4\).](#)

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION	RESULT
A4-11 (STP) - Body ground	Stop light switch assembly on (Brake pedal depressed)	11 to 14 V	V

Post-procedure1

(f) None

**OK** ► REPLACE BRAKE ACTUATOR ASSEMBLY

Click here [INFO](#)

**NG** ► REPAIR OR REPLACE HARNESS OR CONNECTOR

<b>10.</b>	<b>CHECK HARNESS AND CONNECTOR (STOP LIGHT SWITCH ASSEMBLY - STOP LIGHT)</b>
------------	--

(a) Check that there is no open in the wire harnesses and connectors from terminal OUT of the stop light switch assembly to the stop lights.

OK:

No open.

**OK** ► REPLACE BRAKE ACTUATOR ASSEMBLY

Click here [INFO](#)

**NG** ► REPAIR OR REPLACE HARNESS OR CONNECTOR

